

**SENSAPHONE®**  
REMOTE MONITORING SOLUTIONS

Wireless Sensor Gateway  
WSG30

***USER'S MANUAL***

***Version 1.8***

Every effort has been made to ensure that the information in this document is complete, accurate and up-to-date. Sensaphone assumes no responsibility for the results of errors beyond its control. Sensaphone also cannot guarantee that changes in equipment made by other manufacturers, and referred to in this manual, will not affect the applicability of the information in this manual.

Copyright © 2012 by SENSAPHONE®

First Edition, version 1.7, October 2020

Written and produced by Sensaphone

Please address comments on this publication to:

Sensaphone  
901 Tryens Road  
Aston, PA 19014

## **FCC REQUIREMENTS**

Part 15: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## **RF EXPOSURE**

WARNING: To satisfy FCC RF exposure requirements for mobile transmitting devices, a separation distance of 20 cm or more should be maintained between this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.

# **1 YEAR LIMITED WARRANTY**

PLEASE READ THIS WARRANTY CAREFULLY BEFORE USING THE PRODUCT.

THIS LIMITED WARRANTY CONTAINS SENSAPHONE'S STANDARD TERMS AND CONDITIONS. WHERE PERMITTED BY THE APPLICABLE LAW, BY KEEPING YOUR SENSAPHONE PRODUCT BEYOND THIRTY (30) DAYS AFTER THE DATE OF DELIVERY, YOU FULLY ACCEPT THE TERMS AND CONDITIONS SET FORTH IN THIS LIMITED WARRANTY.

IN ADDITION, WHERE PERMITTED BY THE APPLICABLE LAW, YOUR INSTALLATION AND/OR USE OF THE PRODUCT CONSTITUTES FULL ACCEPTANCE OF THE TERMS AND CONDITIONS OF THIS LIMITED WARRANTY (HEREINAFTER REFERRED TO AS "LIMITED WARRANTY OR WARRANTY"). IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS WARRANTY, INCLUDING ANY LIMITATIONS OF WARRANTY, INDEMNIFICATION TERMS OR LIMITATION OF LIABILITY, THEN YOU SHOULD NOT USE THE PRODUCT AND SHOULD RETURN IT TO THE SELLER FOR A REFUND OF THE PURCHASE PRICE. THE LAW MAY VARY BY JURISDICTION AS TO THE APPLICABILITY OF YOUR INSTALLATION OR USE ACTUALLY CONSTITUTING ACCEPTANCE OF THE TERMS AND CONDITIONS HEREIN AND AS TO THE APPLICABILITY OF ANY LIMITATION OF WARRANTY, INDEMNIFICATION TERMS OR LIMITATIONS OF LIABILITY.

1. **WARRANTOR:** In this Warranty, Warrantor shall mean "Dealer, Distributor, and/or Manufacturer."
2. **ELEMENTS OF WARRANTY:** This Product is warranted to be free from defects in materials and craftsmanship with only the limitations and exclusions set out below.
3. **WARRANTY AND REMEDY: One-Year Warranty** — In the event that the Product does not conform to this warranty at any time during the time of one year from original purchase, warrantor will repair the defect and return it to you at no charge.

This warranty shall terminate and be of no further effect at the time the product is: (1) damaged by extraneous cause such as fire, water, lightning, etc. or not maintained as reasonable and necessary; or (2) modified; or (3) improperly installed; or (4) misused; or (5) repaired or serviced by someone other than Warrantors' authorized personnel or someone expressly authorized by Warrantor's to make such service or repairs; (6) used in a manner or purpose for which the product was not intended; or (7) sold by original purchaser.

LIMITED WARRANTY, LIMITATION OF DAMAGES AND DISCLAIMER OF LIABILITY FOR DAMAGES: THE WARRANTOR'S OBLIGATION UNDER THIS WARRANTY IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT THE WARRANTOR'S OPTION AS TO REPAIR OR REPLACEMENT. IN NO EVENT SHALL WARRANTORS BE LIABLE OR RESPONSIBLE FOR PAYMENT OF ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL AND/OR PUNITIVE DAMAGES OF ANY KIND, INCLUDING BUT NOT LIMITED TO ANY LABOR COSTS, PRODUCT COSTS, LOST REVENUE, BUSINESS INTERRUPTION LOSSES, LOST PROFITS, LOSS OF BUSINESS, LOSS OF DATA OR INFORMATION, OR FINANCIAL LOSS, FOR CLAIMS OF ANY NATURE, INCLUDING BUT NOT LIMITED TO CLAIMS IN CONTRACT, BREACH OF WARRANTY OR TORT, AND WHETHER OR NOT CAUSED BY WARRANTORS' NEGLIGENCE. IN THE EVENT THAT IT IS DETERMINED IN ANY ADJUDICATION THAT THE LIMITED WARRANTIES OF REPAIR OR REPLACEMENT ARE INAPPLICABLE, THEN THE PURCHASER'S SOLE REMEDY SHALL BE PAYMENT TO THE PURCHASER OF THE ORIGINAL COST OF THE PRODUCT, AND IN NO EVENT SHALL WARRANTORS BE LIABLE OR RESPONSIBLE FOR PAYMENT OF ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL AND/OR PUNITIVE DAMAGES OF ANY KIND, INCLUDING BUT NOT LIMITED TO ANY LOST REVENUE, BUSINESS INTERRUPTION LOSSES, LOST PROFITS,

LOSS OF BUSINESS, LOSS OF DATA OR INFORMATION, OR FINANCIAL LOSS, FOR CLAIMS OF ANY NATURE, INCLUDING BUT NOT LIMITED TO CLAIMS IN CONTRACT, BREACH OF WARRANTY OR TORT, AND WHETHER OR NOT CAUSED BY WARRANTORS' NEGLIGENCE.

WITHOUT WAIVING ANY PROVISION IN THIS LIMITED WARRANTY, IF A CIRCUMSTANCE ARISES WHERE WARRANTORS ARE FOUND TO BE LIABLE FOR ANY LOSS OR DAMAGE ARISING OUT OF MISTAKES, NEGLIGENCE, OMISSIONS, INTERRUPTIONS, DELAYS, ERRORS OR DEFECTS IN WARRANTORS' PRODUCTS OR SERVICES, SUCH LIABILITY SHALL NOT EXCEED THE TOTAL AMOUNT PAID BY THE CUSTOMER FOR WARRANTORS' PRODUCT AND SERVICES OR \$250.00, WHICHEVER IS GREATER. YOU HEREBY RELEASE WARRANTORS FROM ANY AND ALL OBLIGATIONS, LIABILITIES AND CLAIMS IN EXCESS OF THIS LIMITATION.

INDEMNIFICATION AND COVENANT NOT TO SUE: YOU WILL INDEMNIFY, DEFEND AND HOLD HARMLESS WARRANTORS, THEIR OWNERS, DIRECTORS, OFFICERS, EMPLOYEES, AGENTS, SUPPLIERS OR AFFILIATED COMPANIES, AGAINST ANY AND ALL CLAIMS, DEMANDS OR ACTIONS BASED UPON ANY LOSSES, LIABILITIES, DAMAGES OR COSTS, INCLUDING BUT NOT LIMITED TO DAMAGES THAT ARE DIRECT OR INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL, AND INCLUDING ATTORNEYS FEES AND LEGAL COSTS, THAT MAY RESULT FROM THE INSTALLATION, OPERATION, USE OF, OR INABILITY TO USE WARRANTORS' PRODUCTS AND SERVICES, OR FROM THE FAILURE OF THE WARRANTORS' SYSTEM TO REPORT A GIVEN EVENT OR CONDITION, WHETHER OR NOT CAUSED BY WARRANTORS' NEGLIGENCE.

YOU AGREE TO RELEASE, WAIVE, DISCHARGE AND COVENANT NOT TO SUE WARRANTORS, THEIR OWNERS, DIRECTORS, OFFICERS, EMPLOYEES, AGENTS, SUPPLIERS OR AFFILIATED COMPANIES, FOR ANY AND ALL LIABILITIES POTENTIALLY ARISING FROM ANY CLAIM, DEMAND OR ACTION BASED UPON ANY LOSSES, LIABILITIES, DAMAGES OR COSTS, INCLUDING BUT NOT LIMITED TO DAMAGES THAT ARE DIRECT OR INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL, AND INCLUDING ATTORNEYS FEES AND LEGAL COSTS, THAT MAY RESULT FROM THE INSTALLATION, OPERATION, USE OF, OR INABILITY TO USE WARRANTORS' PRODUCTS AND SERVICES, OR FROM THE FAILURE OF THE WARRANTORS' SYSTEM TO REPORT A GIVEN EVENT OR CONDITION, WHETHER OR NOT CAUSED BY WARRANTORS' NEGLIGENCE, EXCEPT AS NECESSARY TO ENFORCE THE EXPRESS TERMS OF THIS LIMITED WARRANTY.

EXCLUSIVE WARRANTY: THE LIMITED WARRANTY OR WARRANTIES DESCRIBED HEREIN CONSTITUTE THE SOLE WARRANTY OR WARRANTIES TO THE PURCHASER. ALL IMPLIED WARRANTIES ARE EXPRESSLY DISCLAIMED, INCLUDING: THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR USE AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND THE WARRANTY OF NON-INFRINGEMENT AND/OR ANY WARRANTY ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

It must be clear that the Warrantors are not insuring your premises or business or guaranteeing that there will not be damage to your person or property or business if you use this Product. You should maintain insurance coverage sufficient to provide compensation for any loss, damage, or expense that may arise in connection with the use of products or services, even if caused by Warrantors' negligence. The warrantors assume no liability for installation of the Product and/or interruptions of the service due to strikes, riots, floods, fire, and/or any cause beyond Seller's control, further subject to the limitations expressed in any License Agreement or other Agreement provided by Warrantors to purchaser.

The agreement between the Warrantors and the Purchaser, including but not limited to the terms and conditions herein shall not be governed by the Convention for the International Sale of Goods. Where applicable,

the Uniform Commercial Code as adopted by the State of Delaware shall apply.

4. **PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:** In the event that the Product does not conform to this warranty, the Product should be shipped or delivered freight prepaid to a Warrantor with evidence of original purchase.

5. **LEGAL REMEDIES AND DISCLAIMER:** Some jurisdictions may not allow, or may place limits upon, the exclusion and/or limitation of implied warranties, incidental damages and/or consequential damages for some types of goods or products sold to consumers and/or the use of indemnification terms. Thus, the exclusions, indemnification terms and limitations set out above may not apply, or may be limited in their application, to you. If the implied warranties can not be excluded, and the applicable law permits limiting the duration of implied warranties, then the implied warranties herein are to be limited to the same duration as the applicable written warranty or warranties herein. The warranty or warranties herein may give you specific legal rights that will depend upon the applicable law. You may also have other legal rights depending upon the law in your jurisdiction.

6. **CHOICE OF FORUM AND CHOICE OF LAW:** In the event that a dispute arises out of or in connection with this Limited Warranty, then any claims or suits of any kind concerning such disputes shall only and exclusively be brought in either the Court of Common Pleas of Delaware County, Pennsylvania or the United States District Court for the Eastern District of Pennsylvania.

Regardless of the place of contracting or performance, this Limited Warranty and all questions relating to its validity, interpretation, performance and enforcement shall be governed by and construed in accordance with the laws of the State of Delaware, without regard to the principles of conflicts of law.

Effective date 05/01/2004  
PHONETICS, INC. d.b.a. SENSAPHONE  
901 Tryens Road  
Aston, PA 19014  
Phone: 610.558.2700 Fax: 610.558.0222  
[www.sensaphone.com](http://www.sensaphone.com)

# TABLE OF CONTENTS

FCC Requirements .....	II
RF Exposure .....	II
1 Year Limited Warranty .....	III
<b>CHAPTER 1: INTRODUCTION .....</b>	<b>8</b>
FEATURES .....	8
Technical Support .....	8
<b>CHAPTER 2: INSTALLATION .....</b>	<b>9</b>
Physical Description .....	9
Device Layout .....	9
LCD .....	9
Keypad .....	9
RJ-45 10/100BASE-T Ethernet Port .....	10
Power Jack .....	10
Backup Battery .....	10
Installation .....	10
Parts Required .....	10
Operating Environment .....	10
Wall Mount Installation .....	10
Turning Off the WSG30 .....	11
Battery Replacement .....	11
<b>CHAPTER 3: NETWORK CONFIGURATION .....</b>	<b>12</b>
My network supports DHCP: .....	12
My network does not support DHCP: .....	12
Parameter Descriptions .....	13
<b>CHAPTER 4: CONFIGURING WIRELESS SENSORS .....</b>	<b>14</b>
Routers and End-Points .....	14
Adding Wireless Sensors .....	16
Deleting Wireless Sensors .....	17
Sensor Communication Trouble .....	18
<b>CHAPTER 5: PROGRAMMING .....</b>	<b>19</b>
Introduction .....	19
Setup Menu .....	19
System .....	20
SMTP .....	20
SNMP .....	21
Network .....	22

Admin .....	22
Sensor Programming .....	23
Datalogging Capacity .....	26
Profiles.....	26
Contact Programming .....	27
<b>CHAPTER 6: HISTORY.....</b>	<b>28</b>
Event Log Query .....	28
Datalog Query .....	28
<b>CHAPTER 7: WIRELESS SENSORS .....</b>	<b>29</b>
WSG Wireless Temperature Sensor .....	29
WSG Wireless RTD Temperature Sensor.....	31
WSG Wireless Humidity Sensor .....	34
WSG Wireless Dry Contact Sensor .....	36
WSG Wireless Power Sensor .....	39
WSG Wireless 4-20mA Sensor .....	41
WSG Wireless Spot Water Detection Sensor.....	45
WSG Wireless Zone Water Detection Sensor .....	47
<b>APPENDIX A: WEEKLY TESTING PROCEDURE.....</b>	<b>50</b>
<b>APPENDIX B: WSG30 ACCESSORIES.....</b>	<b>51</b>
<b>APPENDIX C: RETURNING A WSG DEVICE FOR REPAIR .....</b>	<b>52</b>
<b>APPENDIX D: SPECIFICATIONS .....</b>	<b>53</b>
<b>APPENDIX C: MODBUS® SPECIFICATIONS.....</b>	<b>54</b>
Modbus® Notes.....	56
<b>TEST LOG.....</b>	<b>60</b>

# CHAPTER 1: INTRODUCTION

Congratulations on your purchase of the Sensaphone WSG30. This device can work with up to 30 Wireless sensors to monitor Temperature, Humidity, Water on the floor, Power, Dry Contacts, and 4-20mA signals. The sensors use mesh networking technology to create multiple communication paths between the sensors and the WSG30 to ensure reliable communications. Sensors can also be battery powered for those installations where an outlet may not be available. A LCD is provided to show the status of all Wireless sensors. The unit is powered by a plug-in adapter and has a rechargeable backup battery located inside the enclosure. Circuitry in the unit will maintain precise charging of the battery system.

The unit comes in a rugged plastic enclosure with tabs for wall mounting. Connections for a power supply, and Ethernet are easily accessible from the top and bottom of the unit.

## FEATURES

The Sensaphone WSG30 includes the following features:

- Communicates with up to 30 Wireless Sensors
- Monitors its own power supply and battery
- 80 Character lighted LCD
- Built-in rechargeable battery backup
- Rugged plastic enclosure

## TECHNICAL SUPPORT

Reading this instruction manual will help you install and program the WSG30. Programming and sensor configuration are performed using the WSG30 web page. Some programming can also be accessed via the keypad and display.

If there are any questions or problems that arise upon installation or operation, please contact Technical Support at:

SENSAPHONE  
901 Tryens Road  
Aston, PA 19014

Toll Free: 1-877-373-2700

Fax: 1-610-558-0222

support@sensaphone.com



# CHAPTER 2: INSTALLATION

## PHYSICAL DESCRIPTION

The WSG30 is housed in a plastic 7.6”w x 5.1”h x 2.0”d enclosure and is suitable for wall mounting.

## DEVICE LAYOUT

The front panel contains an 80 character LCD and a push button keypad. The bottom of the unit contains the power and Ethernet connections. See figure below:



Figure 1: Device Layout of the WSG30

1 LCD

2 Keypad

3 Ethernet Port (10/100BASE-T)

4 Power Jack

### LCD

The lighted LCD displays sensor information as well as diagnostic and system information.

### KEYPAD

The keypad can be used to navigate through the system menu's to access various sensor and system information.

### RJ-45 10/100BASE-T ETHERNET PORT

This jack is for connecting to your network. Two LEDs indicate Link Status (green) and Receive Data status (yellow).

## **POWER JACK**

Attach the 9VDC power supply to the power jack. The device will power up as soon as power is applied.

## **BACKUP BATTERY**

The device contains a built-in 6V 1.3AH rechargeable battery. The system will monitor the condition of the battery and an alarm can be initiated if the battery gets low. The system will automatically switch over to battery power if main power fails.

## **INSTALLATION**

This section provides information on:

- Operating environment
- Wall installation
- Replacing the battery

## **PARTS REQUIRED**

CAT5 Ethernet cable

Screwdriver

Screws and drywall anchors

## **OPERATING ENVIRONMENT**

Before you install the WSG30 be sure that your operating environment meets the physical requirements of the equipment.

Operating Temperature: 32° to 122°F (0°–50° C)

Humidity: 5–90 %RH, non-condensing

Power: 120VAC 60 Hz outlet within 6' of the installation site

Ethernet: 10/100 ethernet jack nearby

It is recommended that you install the unit in a central location such that the unit has as short a path as possible to all of the Wireless sensors.

## **WALL MOUNT INSTALLATION**

The WSG30 can be wall mounted using (4) #6 screws. Drywall anchors may be used if necessary. Follow the steps below:

- 1) Hold the enclosure up to the wall and mark the location of either the 2 keyholes or the 4 mounting holes with a pencil.
- 2) Drill the holes and insert the drywall anchors (if necessary). Attach the enclosure to the wall with the screws.
- 3) Attach the Ethernet cable and plug the power supply to a 120VAC 60Hz outlet.



Figure 2: Wall-mounted WSG30 Unit

## TURNING OFF THE WSG30

Once the power supply is plugged-in the WSG30 will power up. If power is subsequently removed, the internal battery will continue to power the device. If you wish to turn off the device completely, you must enter the Power Down command at the keypad and then unplug the power supply. See steps below:

- 1) Press Menu.
- 2) Arrow down to Diagnostics and press Enter.
- 3) Arrow down to Power Down and press Enter.
- 4) Unplug the Power Supply, then press OK (Enter).

## BATTERY REPLACEMENT

The WSG30 uses one (1) 6V 1.3AH rechargeable battery (included) for backup power in the event that main power fails. The unit will constantly recharge the battery.

In the event you need to replace the battery, be sure to use battery part # BAT-0020 (see Appendix C: Accessories) to ensure compatibility. To remove or replace the battery, remove the (4) screws from the bottom cover and separate the top and bottom parts of the enclosure. Remove the battery bracket and disconnect the read & black terminals from the battery. Replace the battery, replace the bracket, and attach the battery terminals.

# CHAPTER 3: NETWORK CONFIGURATION

The WSG30 is designed for installation on an Ethernet network. This involves assigning it an IP address. By default the unit will try to acquire an IP address automatically using DHCP. If it is successful you can then use the LCD and keypad to determine the IP address and then assign it a fixed IP address. If no DHCP server is found the unit will fallback to a fixed IP address of 192.168.1.250. Follow the instructions below depending on which scenario applies to your network:

## MY NETWORK SUPPORTS DHCP:

If your network supports DHCP then simply plug your Ethernet cable into the Node's Ethernet port and plug-in the power supply. Check the LCD to see if it has acquired an IP address. If it has, type this IP address into a web browser. The WSG30 Summary Screen will appear. Click Setup, then Network from the menu. Disable DHCP and set a fixed IP address. Enter the Gateway, Subnet Mask and DNS settings as well. The Wireless channel will default to 1. If you have more than one WSG30, you must set a different channel number for each. Click Save when finished.

\*Consult with your network administrator if you're unsure of the proper settings.

## MY NETWORK DOES NOT SUPPORT DHCP:

If your network does not support DHCP then your WSG30 will set its IP address to 192.168.1.250. This address should only be used temporarily. Leaving this address as the factory default could result in networking conflicts if another device is added to your non-DHCP supported network.

If your network does not support DHCP then you will have to use one of the following methods to change the IP address of the unit for the first time.

**NOTE:** It is highly recommended that you consult with your Network Administrator concerning all network related settings.

## NETWORK SETUP USING THE KEYPAD AND LCD DISPLAY

You can configure the Network settings for your WSG30 using the keypad and LCD. Press Menu, then press the down arrow to Network Config, then press Enter. A listing of each Network parameter will appear in the display. The first parameter is the IP Address - press Enter to configure the IP address. A screen similar to the following will appear:

```

IP Address
192.168. 1.250
^
Back . + . - . Next
  
```

The four keypad buttons correspond to the Back, Next, + and - functions in the display. Use the Back and Next keys to move the cursor to the right and left. Use the + and - keys to increment or decrement the values to configure the IP Address. When the cursor is in the last position (far right) the Save option will appear in place of the word Next. Press Save to store your settings. Repeat this process for each of the Network parameters in the Network Config menu. Make sure you disable DHCP. Note that the Wireless Channel will default to 1. If you have more than one WSG30, you must set a different Wireless channel number for each.

After you have configured the network settings, open a web browser to access the WSG30 web page.

## NETWORK SETUP USING YOUR COMPUTER

There are three additional methods listed below to configure the network settings in the WSG30 . These all assume that you do not have a DHCP server and, as a result, the WSG30 has configured itself to the default address of 192.168.1.250. Note that all three options below require you to modify the Network settings on your computer.

### METHOD 1

Using a RJ45 crossover cable connect your PC to the device. Change the IP settings of your network connection to something in 192.168.1.xxx that is not the same as the default IP of the WSG30 . You should now be able to access the Network Configuration page of the unit . Enter the following address into your web browser:

<http://192.168.1.250>

### METHOD 2

Using a network hub, connect only your PC and the WSG30 to the hub. Temporarily change the network IP settings of your PC to something in 192.168.1.xxx range that is not the same as the default IP of the WSG30 . You should now be able to access the following Network Configuration page of the device. Enter the following address into your web browser:

<http://192.168.1.250>.

### METHOD 3

Using a network switch that is configured for DHCP server, connect both your WSG30 and your computer to the switch. When the WSG30 powers up it should have acquired an IP address from the switch's DHCP server. Check the LCD to get the IP address. You should now be able to access the network configuration page of the device by typing the IP address into your browser.

## PARAMETER DESCRIPTIONS

**MAC Address:** This is the Media Access Control address, which in general terms, is the hardware address for the WSG30 Ethernet port. There is a unique address for all network devices.

**DHCP:** Enabling this option means that the WSG30 will automatically obtain an IP address on the network using Dynamic Host Configuration Protocol (DHCP). Disabling this option means that you will have to configure the network parameters manually.

**IP/Address:** This is the entry field for manually configuring the IP address of the WSG30 on your network. This address is provided by you or your network administrator. It is formatted as a standard dotted decimal number.

**Subnet mask:** This is the subnet mask which distinguishes the portion of the IP address that is the network ID from the portion that is the station ID.

**Gateway:** A TCP/IP network must have a gateway to communicate beyond the LAN identified by the network ID. A gateway is a computer or router that is connected to two different networks and can move TCP/IP data from one to the other. If your TCP/IP network has more than one LAN or if you are connecting to the Internet, you will need to know the IP address of the gateway that will transfer TCP/IP data in and out of your LAN. A single LAN that is not connected to other LANs does not require a gateway setting.

**Wireless Channel:** The Wireless channel is used to isolate one WSG30 and its associated sensors from another. Each WSG30 must operate on its own unique channel. Note that the Wireless channel has nothing to do with the frequency of operation.

# CHAPTER 4: CONFIGURING WIRELESS SENSORS

The WSG30 allows you to configure up to 30 wireless sensors. Sensors are available to monitor a variety of environmental conditions - see Appendix B for a complete list. A successful installation will require some planning to make sure everything will work smoothly. The WSG30 and sensors utilize mesh networking technology to ensure reliable wireless communications, but this requires that you follow a few rules during the setup process.

**#1:** Upon initial setup, you must configure one sensor at a time. DO NOT power-up all of your sensors and then configure the system. This will not work.

**#2:** If you will have more than 7 sensors you must configure one or more as a router. See the description below regarding *Routers* and *End Points*. Determine how many routers you will need and configure them first.


## ROUTERS AND END-POINTS

WSG30 wireless sensors can be configured as either *routers* or *end-points*. A sensor configured as a router can be used to provide redundant wireless paths from your sensors back to the WSG30. This is useful if the distance from your sensors to your WSG30 is too far for direct communication. Note that routers must be powered by an external power adapter. In this case, the sensor's AA batteries will serve as backup in the event of a power failure. Note that routers are required once you exceed 7 end-points. You can have as many routers as you like.

A sensor configured as an end-point will simply send its readings back to the WSG30, or a nearby router, and then go into a very low power mode. End-points can be battery-powered and have the capability of operating on batteries for several years. If the end-point is too far from the WSG30 for direct communication, a router must be installed to bridge the gap. See the examples below:


### Example 1 - Up to Seven Sensors within 300' of the WSG30

No routers are required in this case. Each sensor is within range for direct communication with the WSG30 and the number of end-point sensors did not exceed 7.

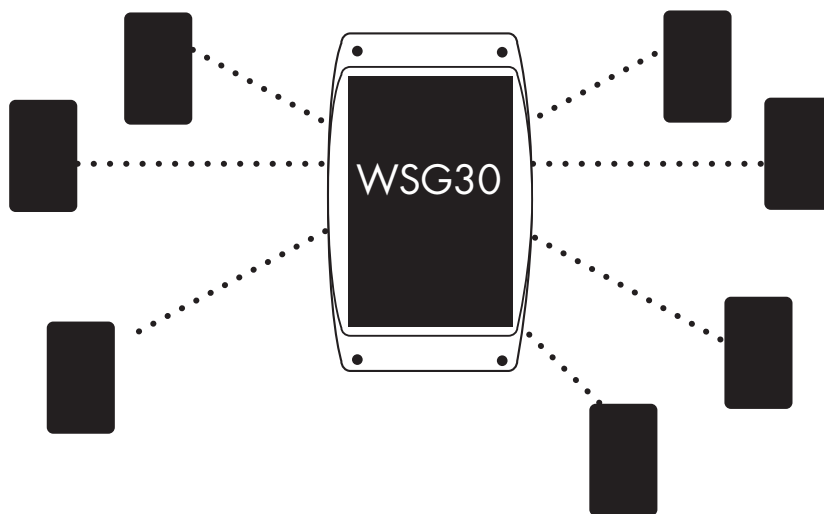


### Example 2 - Eight to Fifteen Sensors

At least one sensor will have to be configured as a router. The router should be located mid-way between the farthest sensor and the WSG30. The routing sensor should be added to the system first.

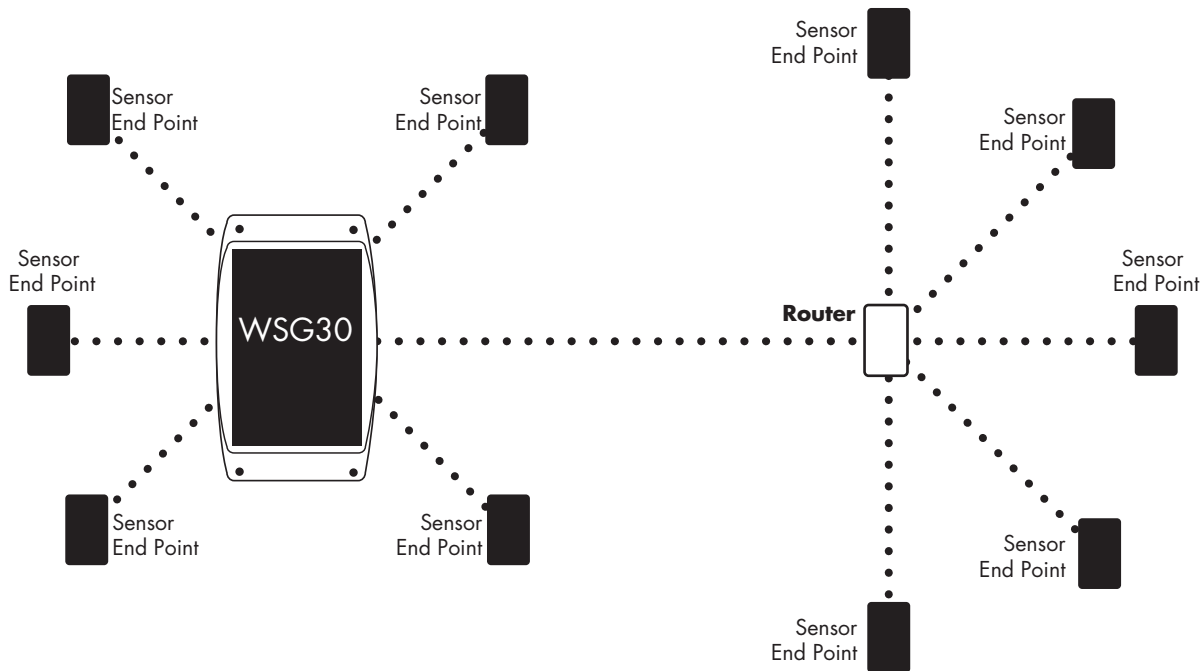


### Example 3 - Sixteen to Twenty three Sensors

At least two sensors will have to be configured as routers. The routers should be located an equal distance between the farthest sensor and the WSG30, and centrally located to minimize the distance between sensors in the general area of the router and the WSG30. The routing sensors should be added to the system first.

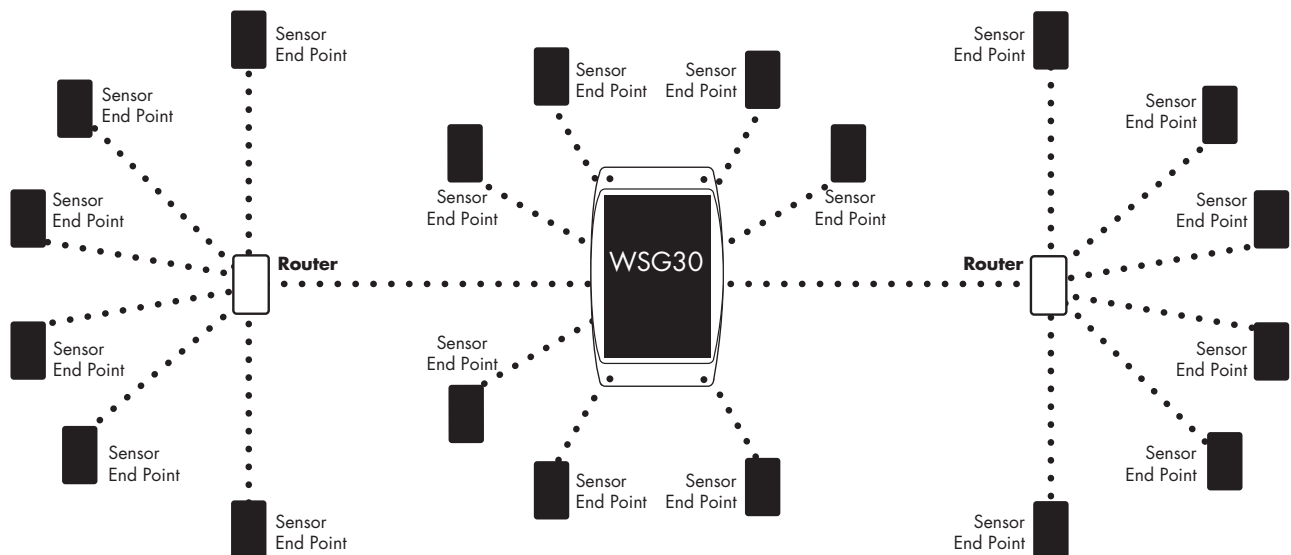

### Example 4 - Twenty Four to Thirty Sensors

At least three sensors will have to be configured as routers. The routers should be located an equal distance between the farthest sensor and the WSG30, and centrally located to minimize the distance between sensors in the general area of the router and the WSG30. The routing sensors should be added to the system first.

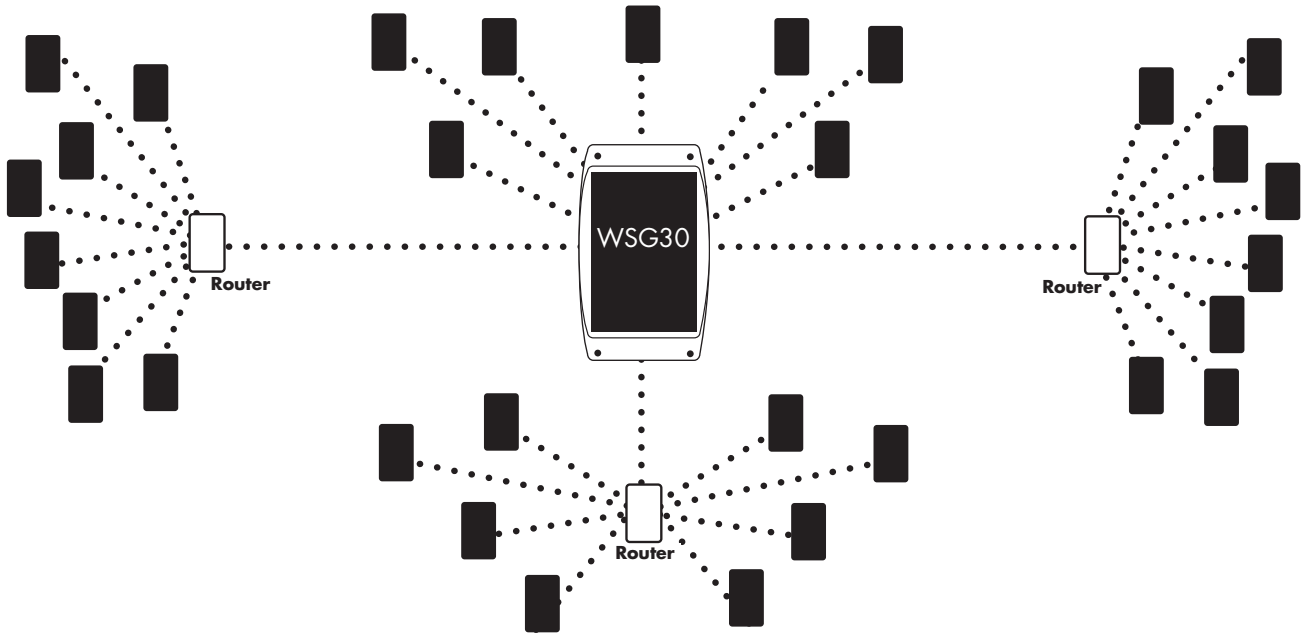

## ADDING WIRELESS SENSORS

To add a wireless sensor click *Sensors* from the main menu, then click the *Add* button. Enter a sensor *Name*, the sensor *Serial Number*, choose the operating *Mode* (either End Point or Router), then select the *Sampling Frequency* (1-5 seconds). See sample figure below:

**Add Wireless Sensor**


**Id:** 16: Unconfigured

**Name:** Room 410 4th Floor

**Serial #:** 1234

**Mode:**  End Point  Router

**Sampling Rate:** 3 Seconds

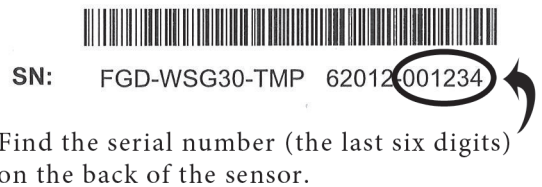

Find the serial number (the last six digits) on the back of the sensor.

Add Sensor screen and Serial Number sticker



Click *Save* when finished. Next, insert batteries into the sensor and connect a power supply (if required). A power supply is required if the sensor is configured to be a Router. A power supply is optional if configured as an End Point. Monitor the Summary or Sensors screen to confirm that the sensor has connected.

### NOTES ABOUT SENSOR PROGRAMMING

In end-point mode the sensor consumes minimal power, which allows it to run on batteries. In router mode the sensor will form a wireless network with the WSG30 and other sensors to increase communication reliability and extend the range of your sensor network. In router mode you must use an external power supply, in which case the batteries serve as back-up power in the event of a power failure.

The Sampling Rate can be set to a range between 1 and 5 seconds. This selects how often the sensor reads the monitored value (temperature, humidity, ...). A longer sampling rate will also affect how frequently the sensor transmits its data to the WSG30. As a result, higher sampling rates will extend battery life. The chart below illustrates how the programmed sampling rate affects the update interval and battery life.

Sampling Interval (sec)	Update Interval (sec)	Battery Life (est.)
1	20	10 months
2	40	1.5 years
3	60	2 years
4	80	2.5 years
5	100	3 years

Depending on the Wireless channel selected the sensor may take up to several minutes to connect. Channel 1 provides the fastest sensor connect time. You can continue to add additional sensors during this time.

### DELETING WIRELESS SENSORS

To delete a sensor you must follow the procedure below while the sensor is still online to ensure that it has successfully detached itself from your WSG30 sensor network. Click on Sensors from the menu. Next, click the box next to the sensor you want to delete, then click the *Delete* button at the bottom of the screen. Wait at least 2 minutes before removing power from the sensor.

Alternatively, you can use the keypad to delete a sensor. Press the *Menu* key, select *Inputs*, then press the *Enter* key. Use the Up/Down Arrows to locate the sensor you want to delete, then press the *Enter* key. Press the down arrow to select *Delete*, then press *Enter*. The unit will confirm that you want to delete the sensor - press *Enter* to confirm. Wait at least 2 minutes before removing power from the sensor.

## **SENSOR COMMUNICATION TROUBLE**

If a sensor stops communicating with the WSG30 the web page will indicate the sensor status as “Trouble” and an alarm message will be sent indicating that the wireless sensor is not responding. This could occur for the following reasons:

- The batteries have died
- A power failure has occurred
- The sensor was moved too far from the WSG30
- A routing sensor was removed or deleted from the system
- A source of interference was introduced, such as a WiFi or Bluetooth device, new machinery or electrical equipment, etc...
- A physical barrier has been introduced such as a wall, metal cabinet, or other obstruction that could be blocking the wireless signal

To verify that the sensor is still functioning try installing new batteries and moving it close to the WSG30, and see if it re-establishes communication. Contact Sensaphone technical support if the problem cannot be resolved.

# CHAPTER 5: PROGRAMMING

## INTRODUCTION

The WSG30 is completely programmable from the internal webpage. This makes it easy to setup, program, and utilize the features of the device. The web page can be accessed by opening your internet browser (Chrome, Firefox, Safari, ...) and entering the IP address of your WSG30 (see the Network Configuration section in Chapter 1 for assistance). The menu items along the blue bar at the top of screen will help you locate specific programming parameters and features. The Summary screen is your main page to view the current status of all monitored conditions.

**Sensaphone WSG30 Wireless Sensor Gateway** Logout  
 Last Refresh: 12/14/2011 4:58:24pm

Summary   Setup   Sensors   Profiles   History

**Name:** My Company Inc.   **Battery:** 100.0%   **Description:** Wireless Monitoring System  
**Location:** 4th St. Chicago, IL   **Power:** On

### Summary

**Alarms**

Name	Value	Status	Type	Last Alarm
No active alarms.				

**Sensors**

Name	Value	Status	Type	Last Alarm
Special Arc Lab #2	26.0%	OK	Humidity	None
Special Arc Lab #2	79.9F	OK	Temp 2.8K F	None
Incubator Power	On	OK	External Power	12/9/2011 1:25:27pm
Lab Server Rack	82.1F	OK	Temp 2.8K F	12/7/2011 12:21:11pm
Lab Refrigerator #1	41.6F	OK	Temp 2.8K F	None
Lab Refrigerator #2	40.7F	OK	Temp 2.8K F	10/30/2011 6:08:49pm
2nd floor Hall	26.0%	OK	Humidity	11/13/2011 11:41:17pm
Light Intensity	425.0lumens	OK	4.20 mA	12/14/2011 4:46:34pm
DI Water System	Dry	OK	Water	None
System Current	40.0amps	OK	4.20 mA	12/7/2011 12:28:10am
Water Flow	55.4gpm	OK	4.20 mA	None
Air Pressure	41.1psi	OK	4.20 mA	None
Equipment Room	60.4F	OK	Temp 2.8K F	None
Power	On	OK	Internal Power	11/16/2011 1:28:35pm
Battery	100.0%	OK	Internal Battery	None

Fig 1: Summary Screen

## SETUP MENU

The Setup menu provides access to several programming screens dealing with the configuration of the device. They are divided into the following areas: System, SMTP, Modbus®, Network, & Administration. A description of each area and the associated programming parameters are described below.

**Sensaphone WSG30 Wireless Sensor Gateway** Logout  
 Last Refresh: 12/14/2011 2:28:23pm

Summary   **Setup**   Sensors   Profiles   History

**Name:** My Company Inc.   **Battery:** 100.0%   **Description:** Wireless Monitoring System  
**Location:** 4th St. Chicago, IL   **Power:** On

### Setup

System | SMTP | SNMP | Modbus | Network | Admin

**Name:**

**Description:**

**Location:**

**Time Server:**

**Escalation Delay:**  Minutes

Change System Time

**Daylight Savings Time:**  Enable    Disable

Fig 2: System setup screen

## SYSTEM

The System settings are used to describe and configure general properties of the system. The information entered into the Unit Name, Description, and Location fields will appear at the top of the webpage and on e-mail alarm messages. The Unit Name will appear on SMS text messages. Use these fields to help identify the facility and/or location so that when alarms happen you'll know exactly where the trouble occurred.

This screen also provides an entry for a Time Server using the Time Protocol (TP) format on port 37. This is used to periodically synchronize the system clock to keep it accurate. It is recommended that you keep this set to the default setting (i.e. time.sensaphone.com).

The Escalation Delay provides the ability to delay alarm delivery to selected users that may only be interested in receiving alarms if they persist for a particular length of time. Each user can have a programmable Escalation Priority from 1 to 8. When an alarm occurs the WSG30 will deliver alarm messages to all users at priority level 1. Then it will wait the duration of the Escalation Delay and send messages to priority level 2, as long as the alarm still exists, and so on with priority 3, 4, 5,.... Once the alarm no longer exists, those users who have higher escalation levels will not be contacted.

The System Date and Time can be configured by clicking the Change System Time box. Enter the current date and time, then click Save.

## SMTP

The SMTP (Simple Mail Transfer Protocol) section is where you must configure your e-mail server settings. To have the unit send e-mail or SMS Text messages, you need to set the SMTP Server name and the Return e-mail Address. If your SMTP server requires authentication then check the Security Enabled box and fill-in the Username and Password (if required). The WSG30 also allows you to change the SMTP port number in the event that your internet service provider is using a nonstandard port. Port 25 is the standard port number, but 587 is also becoming more common as well. Note that the WSG30 will not work with SMTP servers that require TLS or SSL encryption. As a result, it will not work with web-based e-mail providers such Gmail, Hotmail, Yahoo!Mail, or AOL. If you do not have a compatible SMTP server available to you, then contact Sensaphone Technical support for other options.

Sensaphone WSG30 *Wireless Sensor Gateway* Logout  
Last Refresh: 12/14/2011 2:30:17pm

Summary   Setup   Sensors   Profiles   History

**Name:** My Company Inc.   **Battery:** 100.0%   **Description:** Wireless Monitoring System  
**Location:** 4th St. Chicago, IL   **Power:** On

**Setup**

System | **SMTP** | SNMP | Modbus | Network | Admin

Server:   
Port:   
Return Address:   
Security:  Enable  Disable

Fig 3: SMTP setup screen.

## SNMP

The WSG30 contains an SNMP (Simple Network Management Protocol) feature that allows the device to be accessed from third party network management software. The unit supports versions v1 and v2c of the protocol, over both UDP and TCP transports. Read and write access to most of the WSG30 parameters is provided along with the ability to send traps when alarms occur. A complete SNMPv1 MIB is provided on the WSG30 CD.

Fig 4: SNMP setup screen

### Common OIDs for Sensor Values

Sensor 1 Value .1.3.6.1.4.1.8338.1.1.4.1.1.1.1.48

Sensor 2 Value .1.3.6.1.4.1.8338.1.1.4.1.1.1.2.48

Sensor 3 Value .1.3.6.1.4.1.8338.1.1.4.1.1.1.3.48

## MODBUS®

The WSG30 can be accessed via Modbus®TCP protocol and function as a slave device. To use this feature select the desired Modbus® Mode, Port number, and Bit Representation for your Modbus® network.

Fig 5: Modbus setup screen

## NETWORK

The Network Settings page allows you to view and configure all parameters associated with accessing the device via the Ethernet port (see Network Configuration in chapter 1 for details). This screen also displays the device's MAC address and lets you configure the web page port number. Note that if you change the port number to anything other than 80 (default) you will be required to enter the port number as part of the device address in your browser (e.g xxx.xxx.xxx.xxx:### where x's represent the ip address and #'s represent the port number).

The screenshot shows the 'Sensaphone WSG30 Wireless Sensor Gateway' interface. At the top, there is a 'Logout' link and a 'Last Refresh' timestamp of 12/14/2011 2:34:30pm. Below this is a navigation menu with tabs for Summary, Setup, Sensors, Profiles, and History. The main content area displays system information: Name (My Company Inc.), Location (4th St. Chicago, IL), Battery (100.0%), Power (On), and Description (Wireless Monitoring System). The 'Setup' section is active, showing sub-tabs for System, SMTP, SNMP, Modbus, Network, and Admin. The 'Network' sub-tab is selected, displaying the following configuration fields:

- Wireless Channel: 3
- Ethernet Mode: Auto
- DHCP:  Enable  Disable
- MAC Address: 00-07-F9-00-4B-64
- IP Address: 10.1.4.24
- Subnet: 255.255.255.0
- Gateway: 10.1.4.1
- DNS Server: 10.1.2.1
- Web Server Settings:
  - HTTP Port: 80

At the bottom of the setup area are three buttons: Save, Reset, and Cancel.

Fig 6: Network setup screen

## ADMIN

The Administration screen provides options to Save and Load your programming, update your WSG30 with new firmware and Reset to factory defaults. You can also choose to enable security for your WSG30. A System Administrator password must be created before any of your User Profile logins will become active. To create a System Administrator password check the Change Password box and enter a password. The username for the Administrator account is "admin". To delete the administrator account (and disable user logins) simply delete the admin password and click Save. The Programming Save function will create a file that includes all programming except the Network settings and the Administration Password. Likewise when a file is loaded, the Network settings and the Administration password will be preserved. Note that Uploading a programming file will erase the contents of the Eventlog and Datalog.

**Sensaphone WSG30 Wireless Sensor Gateway** Logout  
Last Refresh: 12/14/2011 2:37:46pm

Summary   Setup   Sensors   Profiles   History

**Name:** My Company Inc.   **Battery:** 100.0%   **Description:** Wireless Monitoring System  
**Location:** 4th St. Chicago, IL   **Power:** On

### Setup

System | SMTP | SNMP | Modbus | Network | **Admin**

**Security Settings**  
Username: admin  
 Change Password

**Firmware Upload**  
Current: v.1.48b.C  
Upload:  Browse...

**Programming Upload**  
Upload:  Browse...

**Programming Save**

**Reset to Defaults**

Fig 7: Admin setup screen

## SENSOR PROGRAMMING

This section explains how to program the Sensor parameters for monitoring, alarming, and data logging based on your requirements. The WSG30 features numerous settings for customizing the operation of the device. To begin, click on any sensor listed in the table on the Summary or Sensor screens. The following screen will appear:

**Sensaphone WSG30 Wireless Sensor Gateway** Logout  
Last Refresh: 12/14/2011 4:03:02pm

Summary   Setup   **Sensors**   Profiles   History

**Name:** My Company Inc.   **Battery:** 100.0%   **Description:** Wireless Monitoring System  
**Location:** 4th St. Chicago, IL   **Power:** On

### Sensor Edit: #15

Sensor:  Enable  Disable  
Name:   
Summary:  Enable  Disable  
Serial #: 4552  
Mode:  End Point  Router  
Sampling Rate:  Seconds  
Type:   
Calibration:   
Alarm Low:   
Alarm High:   
Recognition Time:  Hours  Minutes  Seconds  
Alarm Hold Time:  Minutes  Seconds  
Alarm Delivery:  Enable  Disable  
**Alarm Delivery Settings**  
Schedule:   
Profile Selection:   
Alarm Reset:  Enable  Disable  
Alarm Reset Time:  Hours  Minutes  
Return to Normal:  Enable  Disable  
**Datalog Settings**  
Mode:  Continuous  While In Alarm  Disabled  
Alarm Interval:  Hours  Minutes  Seconds  
Normal Interval:  Hours  Minutes  Seconds

Fig 8: Sensor edit screen

The Sensor Edit page shows all of the parameters that can be programmed for the selected sensor. The definitions below explain how each parameter functions.

**Sensor Enable/Disable:** This setting determines if the Sensor is being used (Enabled) or not (Disabled). Selecting Disabled will remove it from the summary screen and prevent alarms from occurring. It will, however, maintain its wireless connection.

**Name:** Enter a name for the sensor you are monitoring which describes its purpose and/or location. The name will appear on the Summary screen as well as on alarm messages.

**Summary Enable/Disable:** This setting determines if the sensor will appear on the Summary screen.

**Serial Number:** This is the sensor serial number.

**Mode:** This setting specifies the operating mode of the sensor. An Endpoint will periodically send its data back to the WSG30 based on the programmed sampling rate and then go to sleep. An Endpoint can be battery powered for up to two years. A Router will act as a wireless network node which will expand the range of your sensor network. Routers must be powered by an external power supply.

**Type:** For Temperature sensors you can select either degrees Fahrenheit or Celsius. For Dry Contact sensors you can select either Normally Open or Normally Closed.

**Units:** The Units field is used to describe the units of measure for the value being monitored. When Temperature is selected the Units field will automatically display F (Fahrenheit) or C (Celsius). When a 4-20mA type is selected you can enter the appropriate text for the monitored condition (e.g. %RH, PSI, GPM, RPM,...). When you select Normally Open (NO) or Normally Closed (NC) you can choose from several preset descriptions for the Open and Closed state of the input. The first word always describes the Open state of the contact and the second the Closed state. If you choose Custom you can enter your own text for the Open and Closed states. To do this, simply type the words into the lower Units field and separate them with a slash (/). For example, "Slow/Fast", "Safe/Danger", "Dry/Wet".

**Calibration:** This field can be used to offset the sensor value either positive or negative if there is some error in the reading.

**Table Low:** The Table Low value is used to define the lower range (4mA) of your 4-20mA sensor. (only appears when the sensor type is 4-20mA)

**Table High:** The Table High value is used to define the upper range (20mA) of your 4-20mA sensor. (only appears when the sensor type is 4-20mA)

**Alarm Low:** This is used to determine the low level at which a sensor has reached the alarm threshold. The value must fall below the Alarm Limit to trip an alarm.

**Alarm High:** This is used to determine the high level at which a sensor has reached the alarm threshold. The value must exceed the Alarm Limit to trip an alarm.

**Recognition Time:** This is the length of time that an alarm condition must be present before a valid alarm exists and message delivery is started.

**Alarm Hold Time:** When an alarm occurs, the Alarm Hold Time will latch the alarm condition for the programmed time period, thus preventing redundant alarms from sending additional notification messages. This is useful for alarms that are likely to trip several times within a short time period, such as motion detectors.

**Alarm Delivery Enable/Disable:** When Enabled, alarm messages will be delivered, if set to Disabled alarm messages will not be delivered.

**Alarm Delivery Schedule:** This weekly schedule sets the time period(s) when alarm delivery will be active for the selected sensor. The schedule is divided into half-hour increments over the seven weekdays. A check mark indicates that alarm delivery is active for that time period.



## Schedule for Sensor #28

	12 :30	1 :30	2 :30	3 :30	4 :30	5 :30	6 :30	7 :30	8 :30	9 :30	10 :30	11 :30
All	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Sun	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Mon	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Tue	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Wed	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Thu	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Fri	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Sat	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Weekends Weekdays MF 8a-6p

Save Cancel

Fig 9: Sensor schedule screen

**Profile Selection:** This setting determines which User(s) get contacted when the sensor goes into alarm.

**Alarm Reset Enable/Disable:** This setting enables or disables the Alarm Reset Feature. The Alarm Reset feature is used to re-send alarm messages in the event that a fault condition is not corrected in a timely fashion. If an alarm continues to exist for the duration of the programmed Reset Time (see below) the alarm will reset (reactivate) and the alarm message delivery process will begin all over again. This is an optional feature.

**Alarm Reset Time:** This is the time allowed for an alarm's fault condition to be corrected before the WSG30 resets (reactivates) the alarm and begins the message delivery process all over again. It is recommended that this be set to no lower than 30 minutes to prevent numerous messages from being sent.

**Return to Normal Enable/Disable:** This feature instructs the WSG30 to send a message when a sensor has changed from an alarm condition back to a normal condition. Anyone who received the original alarm message will also be sent the Return-to-Normal message.

**Datalogging Mode:** The WSG30 has two modes of data logging for each sensor: Continuous or While In Alarm. In Continuous mode the unit will log the value of the sensor on a fixed time interval all the time. The Normal Interval sets the logging rate while the value is within the normal range. The Alarm Interval sets the logging rate while the value is an alarm condition. By choosing the While In Alarm mode you can choose to have the unit only log values when it exceeds the alarm limits. This option minimizes the amount of data collected and maximizes the storage capacity inside the WSG30.

**Normal Datalog Interval:** This is the interval that data will be logged while the sensor is within the programmed alarm limits. To maximize the available memory for datalogging, set the Datalog Interval for each sensor to multiples of each other. For example, sensor 1 can be set to 30 seconds, sensor 2 to 1 minute, sensor 3 to 5 minutes, etc...

**Alarm Datalog Interval:** This is the interval that data will be logged while the sensor is beyond the programmed alarm limits. (Note: this is regardless of the programmed Alarm Recognition Time).

## DATALOGGING CAPACITY

The datalogging capacity of the WSG30 varies depending on how many sensors you're logging and what the logging interval is for each. Memory is maximized if the logging interval for each sensor is in multiples of each other. For example, if sensor 1 is set to 1 minute and sensor 2 is set to 5 minutes, you'll get better memory usage than if sensor 1 were set to 1 minute and sensor 2 was set to 2.5 minutes.

Here are some typical results:

- If you only log 1 sensor (at any interval), the WSG30 will store a maximum of 67,000 samples
  - If you log 15 sensors at the same interval, the WSG30 will store 238,000 samples of each sensor
  - If you log 30 sensors at the same interval, the WSG30 will store 243,000 samples samples of each sensor
- Once the datalogger is full it will start overwriting the oldest records.

## PROFILES

This section explains how to setup User accounts (Profiles) including Username, Password, Access Level, Escalation Level, Schedules, and Contact methods. To begin, click on Profiles from the menu bar. The following screen will appear:

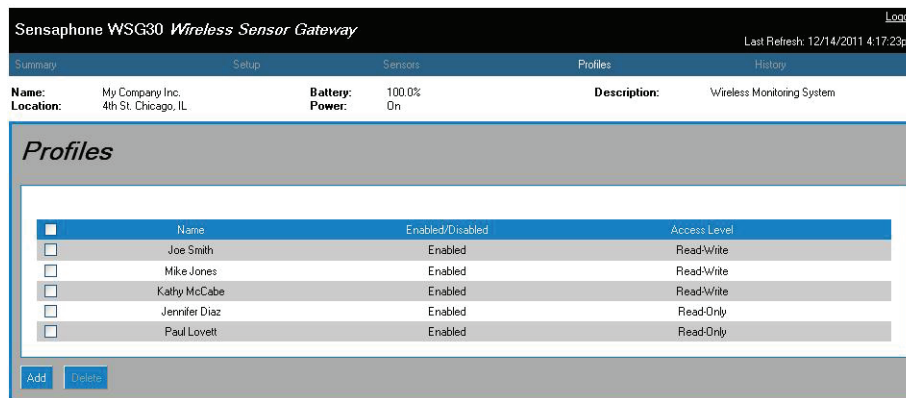


Fig 10: Profile summary screen

The WSG30 allows you to have up to 8 User Profiles. Each Profile can have up to 4 contacts (e-mail, SMS-Text Message, or SNMP trap). You can choose to have a secure system with separate Usernames and Passwords for each Profile, or you can choose to make the device accessible with no security (e.g. no login required). Note that to have a secure system using Usernames & Passwords you must first create an Admin password on the Admin Setup screen.

To add a new Profile click the Add button. To edit an existing Profile, click on the user's name in the table. The following screen will appear:

A description of each parameter is described below.

**Enable/Disable:** An Enabled Profile can login to the system and alarm messages will be delivered. A Disabled Profile cannot login and no alarm messages will be delivered. This feature is useful to temporarily suspend access or alarm delivery without deleting all of the Profile's programming.

**Name:** Enter the User's name in this field.

**Username:** Enter a Username for login purposes (optional)

**Password:** Enter a Password for login purposes (optional)

**Access Level:** If you are configuring a secure system then you must assign the Profile either Read-Only access or Read-Write access. Read Only access means that this Profile can only view the Summary page and query the History logs. Read-Write access gives the Profile full programming privileges to the system except for the Network and Admin screens.

**Escalation Priority:** This can be set to any number between 1 and 8. Profiles set to escalation level 1 will immediately receive alarm messages. Those set to higher escalation levels will have their alarm messages delayed by the time entered for the Escalation Delay on the System Setup screen. If the alarm condition resets or corrects itself before the Escalation delay expires then no message(s) will be sent to those users with a higher escalation setting. This feature is useful for staggering alarm message delivery based on the duration of the alarm condition.

**Profile Delivery Schedule:** This weekly schedule sets the time period(s) when alarm delivery will be active for the selected Profile. The schedule is divided into half-hour increments over the seven weekdays. A check mark indicates that alarm delivery is active for that time period.

## CONTACT PROGRAMMING

The WSG30 allows you to program up to 4 Contacts per Profile. The Contacts can be either: E-mail, SMS-Text Message, or SNMP Trap. Each contact can have a programmable Schedule so that you only receive messages when your Contact schedule is enabled. A Test button is also provided to check your programming. To add a contact click the Add button:

The screenshot shows a window titled "Contact #1" with the following fields and controls:

- Contact:** Radio buttons for "Enable" (selected) and "Disable".
- Type:** A dropdown menu set to "E-Mail".
- Destination:** A text input field containing "jsmith@mycompanyinc.com".
- Contact Delivery Schedule:** A button labeled "View / Edit".
- At the bottom, there are three buttons: "Save", "Reset", and "Cancel".

Fig 11: Sample email contact programming

The screenshot shows a window titled "Contact #1" with the following fields and controls:

- Contact:** Radio buttons for "Enable" (selected) and "Disable".
- Type:** A dropdown menu set to "SMS".
- SMS Provider:** A dropdown menu set to "AT&T/Cingular".
- Destination:** A text input field containing "888555-1122".
- Contact Delivery Schedule:** A button labeled "View / Edit".
- At the bottom, there are three buttons: "Save", "Reset", and "Cancel".

Fig 12: Sample SMS contact programming

Shown above are example screens for both email and SMS contacts. When selecting SMS be sure to select the proper cellular carrier. A separate schedule can be programmed for each contact. Click Save when finished. To test your programming click in the box next to each Contact you'd like to test, then click the Test button.

To delete a contact, click the box next to the contact you would like to delete, then click the Delete button.

# CHAPTER 6: HISTORY

This chapter explains how to query the Event and Data Log History. The Event Log is a time-stamped list of system events such as System Startup, Alarm Detection, Message Delivery, ... The Data Log contains time stamped records of the input values. The logging rate is configured on the Sensor programming screen for each input. The query results can be viewed on screen within your browser or they can be exported to other file formats (TXT, CSV, XML) for use within other programs, such as Excel. To begin, click on History from the menu bar. The following screen will appear:

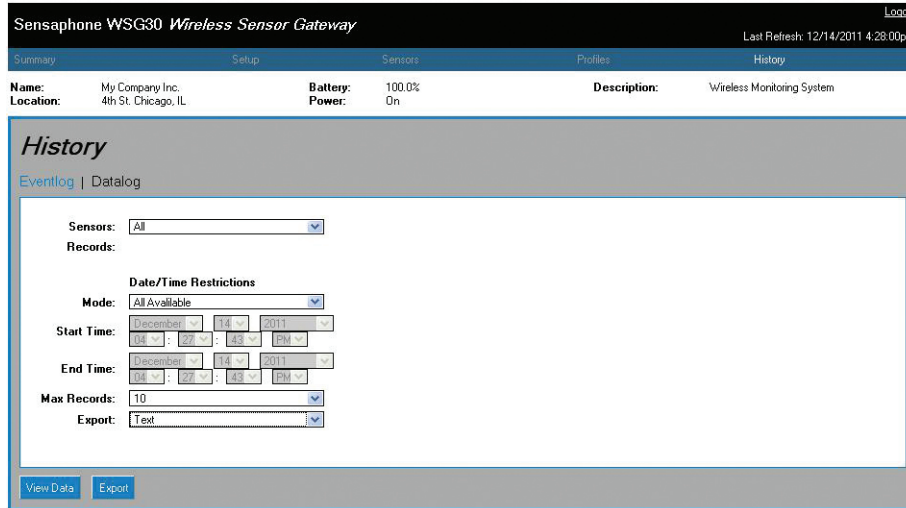


Fig 1: History Screen

## EVENT LOG QUERY

Select Event Log from the top of the screen. Select a particular Sensor to narrow your query results to events associated with a particular sensor or choose All to see all event types in the Event Log. You can narrow the results from a particular time period by selecting the Mode drop-down. This gives you options to choose events from the Previous 24 Hours, the Last 7 days, the Current Month or you can select a Custom time period. When you choose Custom, the Start Time and End Time fields will become active. Enter the start and end times for your query. Next, choose the maximum number of records you want returned for your query, the choices are 25, 50, 100 and All. Finally, click the View Data button to display the results. Alternatively you can Export the results to a file for viewing in another program. Choose the Export file format from the drop-down list (XML, CSV, TXT) and click the Export button to create a file.

## DATALOG QUERY

Select Data Log from the top of the screen. Select a particular Sensor to narrow your query results to a particular sensor or choose All to see samples from all sensors. Next, choose whether you'd like to view All samples, all Normal samples, or specifically samples that exceeded the alarm limits. You can narrow the results from a particular time period by selecting the Mode drop-down. This gives you options to choose events from the Previous 24 Hours, the Last 7 days, the Current Month or you can select a Custom time period. When you choose Custom, the Start Time and End Time fields will become active. Enter the start and end times for your query. Next, choose the maximum number of records you want returned for your query, the choices are 25, 50, 100 and All. Finally, click the View Data button to display the results. Alternatively you can Export the results to a file for viewing in another program. Choose the Export file format from the drop-down list (XML, CSV, TXT) and click the Export button to create a file.

# CHAPTER 7: WIRELESS SENSORS

## WSG WIRELESS TEMPERATURE SENSOR

### INTRODUCTION



The WSG Wireless Temperature sensor provides remote temperature monitoring without running wires. Temperature data is sent from the sensor to the WSG30 via an integrated 2.4GHz Wireless radio. The device can transmit its signal up to 300' indoors and even greater distances when it has line-of-site. The WSG30 series of Wireless sensors also feature mesh networking technology, which allows each sensor to be used as either a Wireless sensor/router or as a low-power battery operated sensor (also referred to as an end point). When used as a router, greater distances can be realized because each sensor/router adds another 300' of range to the system. The sensor comes with 2 AA batteries which will power the sensor for up to 2

years (end point mode). An optional plug-in power supply is also available, in which case the batteries function as backup power if main AC power fails (power supply required for router mode).

**NOTE:** Do not install the sensor in a dirty, humid, or corrosive environment. Do not install the sensor in close proximity to other 2.4GHz devices (WiFi, etc). Do not install the device inside of a metallic enclosure as this will impede it's ability to Wirelessly communicate with the WSG30 .

### PACKAGE CONTENTS

- |                                 |                             |
|---------------------------------|-----------------------------|
| (1) Wireless Temperature Sensor | (2) AA batteries            |
| (1) Plastic drywall anchors     | (1) #6 Metal tapping screws |

### INSTALLATION SUMMARY

- 1) Locate the sensor serial number on the small white label inside the sensor enclosure .
- 2) Enter the serial number into the WSG30 using the web page or keypad.
- 3) Mount the sensor.
- 4) Attach power supply if using as a router and install the batteries.
- 5) Watch the LCD or web page to confirm that the sensor has connected with the WSG30.

### SENSOR REGISTRATION

Before you power-up the sensor you must enter the serial number, located on the small white label inside the sensor enclosure, into the WSG30. You can do this with the WSG30 web page or you can enter it using the WSG30 keypad (see Sensor Registration earlier in this manual). Just be sure to jot down the serial number before you attach the sensor to the wall.

### BATTERY INFORMATION

The Wireless Temperature Sensor can operate for up to 2 years on a good set of AA batteries when the sensor is configured as an end-device with a 5 second sampling interval. Sensors configured as routers must use a plug-in power supply. Faster sampling intervals will reduce battery life. Early production sensors must be used with AA alkaline batteries only. Later sensors are optimized for AA lithium batteries. Sensors optimized for lithium batteries will have a label affixed above the battery holder indicating AA lithium batteries are recommended.

## BATTERY INSTALLATION

Carefully separate the top of the enclosure from the bottom. Locate the battery holder on the circuit board. Take note of the polarity markings identifying the positive and negative ends of the batteries. Install the batteries. Re-attach the top and cover.

## POWER SUPPLY WIRING (ROUTER MODE)


When using your wireless sensor in Router mode, you must use an external power supply (Sensaphone Part #XFR-0041). This is required because router mode uses more power than can be supplied by batteries alone for an extended period of time. You can also use a power supply when the sensor is configured as an End Point, which will greatly extend the life of the batteries and minimize the need to change them.

To connect the power supply, remove the sensor cover and locate the screw terminals labeled “5V DC”. connect the positive wire from the power supply to the “+” terminal. Plug the power supply into an appropriate outlet.

## MOUNTING

The temperature sensor can be mounted directly on a flat surface. Consideration should be given as to whether or not an electrical outlet will be required if using the optional power supply. Mount the sensor as high as possible to provide for optimal Wireless transmission. When installed within a building where the Wireless signal must travel through several obstructions, the sensor should be located within 250’ of the WSG30 or within 300’ of a sensor/router.

Use a pencil to mark the hole locations at the top and bottom of the housing. Install the drywall anchors (if necessary) to the wall. Attach the housing to the wall using #6 tapping screws.

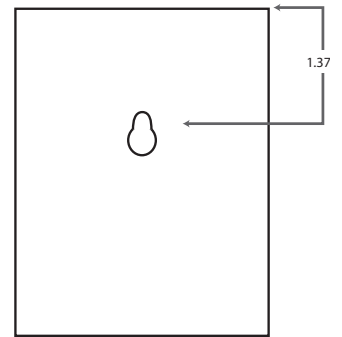

## SPECIFICATIONS

Operating Temperature Range: 32° to 122° F (0° to 50° C)

Monitoring Temperature Range: 32° to 122° F (0° to 50° C)

Monitoring Temperature Range with external probe: -109° to 115° F (-85° to 57°C)

Operating Humidity: 5- 90% RH non-condensing

Sensor Type: 2.8K thermistor

Accuracy: ± 1° F

Range (Indoor/Urban): Up to 300’ (90m)

Transmit Power Output: 100mW (20dBm)

Operating Frequency: ISM 2.4 GHz

Power: (2) AA lithium batteries and/or 5VDC (300mA) plug-in adapter

Battery Life: Up to 2 years @ Sampling interval = 5 sec

Dimensions: 3.1” x 3.8” x 1.1”

Housing: White plastic

\*Specifications subject to change without notice

# WSG WIRELESS RTD TEMPERATURE SENSOR

## INTRODUCTION



The WSG Wireless RTD Temperature Sensor provides extended temperature monitoring from -199.7 to 120 degrees C utilizing a 100 Ohm platinum RTD probe. The sensor is available with either a 1” or 14” stainless steel probe and a 10’ cable. Temperature data is sent from the sensor to the WSG30 via an integrated 2.4GHz Wireless radio. The device can transmit its signal up to 300’ indoors and even greater distances when it has line-of-site. The WSG30 series of Wireless sensors also feature mesh networking technology, which allows each sensor to be used as either a Wireless sensor/router or as a low-power battery operated sensor (also referred to as an end point). When used as a router, greater distances can be realized because each sensor/router adds another 300’ of range to the system. The sensor comes with 2 AA Lithium batteries which will power the sensor for up to 2 years (end point mode). An optional plug-in power supply is also available, in which case the batteries function as backup power if main AC power fails (power supply required for router mode).

**NOTE:** Do not install the sensor in a dirty, humid, or corrosive environment. Do not install the sensor in close proximity to other 2.4GHz devices (WiFi, bluetooth, etc). Do not install the device inside of a metallic enclosure as this will impede it’s ability to wirelessly communicate with the WSG30.

**NOTE:** In order for the WSG30 RTD Sensor to work properly your WSG30 main unit must have firmware version 1.73 (or greater) installed. Firmware can be downloaded from the support section of the Sensaphone website at [www.sensaphone.com](http://www.sensaphone.com)

**Note:** Do not submerge the RTD cable in liquid nitrogen. This will cause premature failure of the cable and the epoxy seal on the probe. The RTD sensor with the 14” stainless steel probe is better suited for applications where the probe must be submerged.

## PACKAGE CONTENTS

- |                                 |  |
|---------------------------------|--|
| (1) Wireless Temperature Sensor | (1) 100 Ohm Platinum RTD Probe w/10’ cable |
| (2) AA Lithium batteries        | (1) Plastic drywall anchors                |
| (1) #6 Metal tapping screws     |  |

## INSTALLATION SUMMARY

- 1) Locate the sensor serial number on the small white label inside the sensor enclosure .
- 2) Enter the serial number into the WSG30 using the web page or keypad.
- 3) Mount the sensor.
- 4) Attach power supply if using as a router and install the batteries.
- 5) Watch the LCD or web page to confirm that the sensor has connected with the WSG30.

## SENSOR REGISTRATION

Before you power-up the sensor you must enter the serial number, located on the small white label inside the sensor enclosure, into the WSG30. You can do this with the WSG30 web page or you can

enter it using the WSG30 keypad (see Sensor Registration earlier in this manual). Just be sure to jot down the serial number before you attach the sensor to the wall.

## BATTERY INFORMATION

The Wireless Temperature Sensor can operate for up to 2 years on a good set of AA batteries when the sensor is configured as an end-device with a 5 second sampling interval. Sensors configured as routers must use a plug-in power supply. Faster sampling intervals will reduce battery life. Early production sensors must be used with AA alkaline batteries only. Later sensors are optimized for AA lithium batteries. Sensors optimized for lithium batteries will have a label affixed above the battery holder indicating AA lithium batteries are recommended.

## BATTERY INSTALLATION

Carefully separate the top of the enclosure from the bottom. Locate the battery holder on the circuit board. Take note of the polarity markings identifying the positive and negative ends of the batteries. Install the batteries. Re-attach the top and cover.

## POWER SUPPLY WIRING (ROUTER MODE)


When using your wireless sensor in Router mode, you must use an external power supply (Sensaphone Part #XFR-0041). This is required because router mode uses more power than can be supplied by batteries alone for an extended period of time. You can also use a power supply when the sensor is configured as an End Point, which will greatly extend the life of the batteries and minimize the need to change them.

To connect the power supply, remove the sensor cover and locate the screw terminals labeled “5V DC”. connect the positive wire from the power supply to the “+” terminal. Plug the power supply into an appropriate outlet.

## MOUNTING

The temperature sensor can be mounted directly on a flat surface. Consideration should be given as to whether or not an electrical outlet will be required if using the optional power supply. Mount the sensor as high as possible to provide for optimal Wireless transmission. When installed within a building where the Wireless signal must travel through several obstructions, the sensor should be located within 250’ of the WSG30 or within 300’ of a sensor/router.

Use a pencil to mark the hole locations at the top and bottom of the housing. Install the drywall anchors (if necessary) to the wall. Attach the housing to the wall using #6 tapping screws.

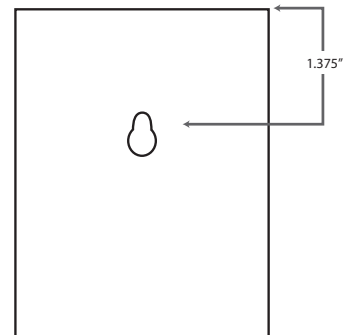

## RTD WIRING

The RTD probe includes a 3-wire 10’ Teflon cable. DO NOT change the length of the cable! Extending or reducing the cable length will affect the accuracy of the temperature measurement. Connect the RED wire to the Sensor negative terminal “-”. Connect the white wires to the Sensor positive “+” and the “RTD Sense” terminal. Take care not to flex the cable when installed in very cold temperatures (e.g. below -50 deg C)



## SPECIFICATIONS

Operating Temperature Range: 32° to 122° F (0° to 50° C)

Monitoring Temperature Range: -326° to 248° F (-199.7° to 120° C)

Operating Humidity: 5- 90% RH non-condensing

Sensor Type: 100 Ohm Platinum RTD

Accuracy:  $\pm 1^\circ \text{C}$

Range (Indoor/Urban): Up to 300' (90m)

Transmit Power Output: 79mW (+19dBm)

Operating Frequency: ISM 2.4 GHz

Power: (2) AA lithium batteries and/or 5VDC (300mA) plug-in adapter

Battery Life: Up to 2 years @ Sampling interval = 5 sec, Endpoint mode

Dimensions: 3.1" x 3.8" x 1.1"

Housing: White plastic

\*Specifications subject to change without notice

# WSG WIRELESS HUMIDITY SENSOR

## INTRODUCTION



The WSG Wireless Humidity sensor provides remote monitoring without running wires. Data is sent from the sensor to the WSG30 via an integrated 2.4GHz Wireless radio. The device can transmit its signal up to 300' indoors and even greater distances when it has line-of-site. The WSG30 series of Wireless sensors also feature mesh networking technology, which allows each sensor to be used as either a Wireless sensor/router or as a low-power battery operated sensor (also referred to as an end point). When used as a router, greater distances can be realized because each sensor/router adds another 300' of range to the system. The sensor comes with 2 AA lithium batteries which will power the sensor for up to 2 years (end point mode). An optional

plug-in power supply is also available, in which case the batteries function as backup power if main AC power fails (power supply required for router mode).

**NOTE:** Do not install the sensor in a dirty, humid, or corrosive environment. Do not install the sensor in close proximity to other 2.4GHz devices (WiFi, etc). Do not install the device inside of a metallic enclosure as this will impede it's ability to Wirelessly communicate with the WSG30 .

## PACKAGE CONTENTS

- (1) Wireless Humidity Sensor
- (2) AA Lithium batteries
- (1) Plastic drywall anchors
- (1) #6 Metal tapping screws

## INSTALLATION SUMMARY

- 1) Locate the sensor serial number on the small white label inside the sensor enclosure.
- 2) Enter the serial number into the WSG30 using the web page or keypad.
- 3) Mount the sensor.
- 4) Attach power supply if using as a router and install the batteries.
- 5) Watch the LCD or web page to confirm that the sensor has connected with the WSG30.

## SENSOR REGISTRATION

Before you power-up the sensor you must enter the serial number, located on the small white label inside the sensor enclosure, into the WSG30. You can do this with the WSG30 web page or you can enter it using the WSG30 keypad (see Sensor Registration earlier in this manual). Just be sure to jot down the serial number before you attach the sensor to the wall.

## BATTERY INFORMATION

The Wireless Humidity Sensor can operate for up to 2 years on a good set of AA batteries when the sensor is configured as an end-device with a 5 second sampling interval. Sensors configured as routers must use a plug-in power supply. Faster sampling intervals will reduce battery life. Early production sensors must be used with AA alkaline batteries only. Later sensors are optimized for AA lithium batteries. Sensors optimized for lithium batteries will have a label affixed above the battery holder indicating AA lithium batteries are recommended.

## BATTERY INSTALLATION

Carefully separate the top of the enclosure from the bottom. Locate the battery holder on the circuit board. Take note of the polarity markings identifying the positive and negative ends of the batteries. Install the batteries. Re-attach the top and cover.

## POWER SUPPLY WIRING (ROUTER MODE)


When using your wireless sensor in Router mode, you must use an external power supply (Sensaphone Part #XFR-0041). This is required because router mode uses more power than can be supplied by batteries alone for an extended period of time. You can also use a power supply when the sensor is configured as an End Point, which will greatly extend the life of the batteries and minimize the need to change them.

To connect the power supply, remove the sensor cover and locate the screw terminals labeled “5V DC”. connect the positive wire from the power supply to the “+” terminal. Plug the power supply into an appropriate outlet.

## MOUNTING

The humidity sensor can be mounted directly on a flat surface. Consideration should be given as to whether or not an electrical outlet will be required if using the optional power supply. Mount the sensor as high as possible to provide for optimal Wireless transmission. When installed within a building where the Wireless signal must travel through several obstructions, the sensor should be located within 250’ of the WSG30 or within 300’ of a sensor/router.

Use a pencil to mark the hole locations at the top and bottom of the housing. Install the drywall anchors (if necessary) to the wall. Attach the housing to the wall using #6 tapping screws.

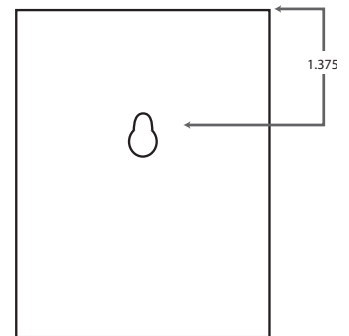

## SPECIFICATIONS

Operating Temperature Range: 32° to 122° F (0° to 50° C)

Operating Humidity Range: 0- 90% RH non-condensing

Accuracy:  $\pm 3\%$  from 20-80% RH ( $\pm 5\%$  otherwise)

Range (Indoor/Urban): Up to 300’ (90m)

Transmit Power Output: 100mW (20dBm)

Operating Frequency: ISM 2.4 GHz

Power: (2) AA lithium batteries and/or 5VDC (300mA) plug-in adapter

Battery Life: Up to 2 years @ Sampling interval = 5 seconds

Dimensions: 3.1” x 3.8” x 1.1” (7.9cm x 9.8cm x 2.85cm)

Housing: White plastic

\*Specifications subject to change without notice

# WSG WIRELESS DRY CONTACT SENSOR

## INTRODUCTION



The WSG Wireless Dry Contact sensor provides remote monitoring without running wires. Contact data is sent from the sensor to the WSG30 via an integrated 2.4GHz Wireless radio. The device can transmit its signal up to 300' indoors and even greater distances when it has line-of-site. The WSG30 series of Wireless sensors also feature mesh networking technology, which allows each sensor to be used as either a Wireless sensor/router or as a low-power battery operated sensor (also referred to as an end point). When used as a router, greater distances can be realized because each sensor/router adds another 300' of range to the system. The sensor comes with 2 AA lithium batteries which will power the sensor for up to 2 years (end point mode). An optional plug-in power supply is also available, in which case the batteries function as backup power if main AC power fails (power supply required for router mode).

**NOTE:** Do not install the sensor in a dirty, humid, or corrosive environment. Do not install the sensor in close proximity to other 2.4GHz devices (WiFi, etc). Do not install the device inside of a metallic enclosure as this will impede it's ability to Wirelessly communicate with the WSG30 .

## PACKAGE CONTENTS

- (1) Wireless Dry Contact Sensor
- (2) AA Lithium batteries
- (1) Plastic drywall anchors
- (1) #6 Metal tapping screws

## INSTALLATION SUMMARY

- 1) Locate the sensor serial number on the small white label inside the sensor enclosure .
- 2) Enter the serial number into the WSG30 using the web page or keypad.
- 3) Mount the sensor.
- 4) Attach power supply if using as a router and install the batteries.
- 5) Watch the LCD or web page to confirm that the sensor has connected with the WSG30.

## SENSOR REGISTRATION

Before you power-up the sensor you must enter the serial number, located on the small white label inside the sensor enclosure, into the WSG30. You can do this with the WSG30 web page or you can enter it using the WSG30 keypad (see Sensor Registration earlier in this manual). Just be sure to jot down the serial number before you attach the sensor to the wall.

## BATTERY INFORMATION

The Wireless Dry Contact Sensor can operate for up to 2 years on a good set of AA batteries when the sensor is configured as an end-device with a 5 second sampling interval. Sensors configured as routers must use a plug-in power supply. Faster sampling intervals will reduce battery life. Early production sensors must be used with AA alkaline batteries only. Later sensors are optimized for AA lithium batteries. Sensors optimized for lithium batteries will have a label affixed above the battery holder indicating AA lithium batteries are recommended.

## BATTERY INSTALLATION

Carefully separate the top of the enclosure from the bottom. Locate the battery holder on the circuit board. Take note of the polarity markings identifying the positive and negative ends of the batteries. Install the batteries. Re-attach the top and cover.

## POWER SUPPLY WIRING (ROUTER MODE)


When using your wireless sensor in Router mode, you must use an external power supply (Sensaphone Part #XFR-0041). This is required because router mode uses more power than can be supplied by batteries alone for an extended period of time. You can also use a power supply when the sensor is configured as an End Point, which will greatly extend the life of the batteries and minimize the need to change them.

To connect the power supply, remove the sensor cover and locate the screw terminals labeled “5V DC”. connect the positive wire from the power supply to the “+” terminal. Plug the power supply into an appropriate outlet.

## MOUNTING


The sensor can be mounted directly on a flat surface. Consideration should be given as to whether or not an electrical outlet will be required if using the optional power supply. Mount the sensor as high as possible to provide for optimal Wireless transmission. When installed within a building where the Wireless signal must travel through several obstructions, the sensor should be located within 250' of the WSG30 or within 300' of a sensor/router.

Use a pencil to mark the hole locations at the top and bottom of the housing. Install the drywall anchors (if necessary) to the wall. Attach the housing to the wall using #6 tapping screws.

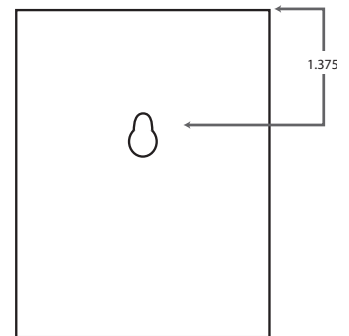

## WIRING

Connect any normally open or normally closed dry contact to the “sensor” terminals on the circuit board. Be sure to strip the wires .25” before inserting and tightening the screws.

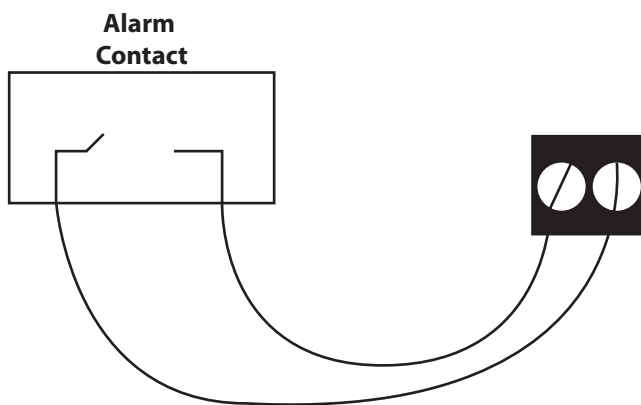

The Wireless Dry Contact sensor will, by default, be set to accept a Normally Open contact. To change the input type to a Normally Closed contact, you can use the web page or use the keypad on the WSG30. To use the keypad, press the Menu button, then select Inputs. Scroll to the dry contact sensor you wish to change and press Enter. Next, scroll down to the Type and press Enter. Choose either N.O. or N.C. and press Save.

## SPECIFICATIONS

Operating Temperature Range: 32° to 122° F (0° to 50° C)

Operating Humidity: 5- 90% RH non-condensing

Range (Indoor/Urban): Up to 250' (76m)

Transmit Power Output: 100mW (20dBm)

Operating Frequency: ISM 2.4 GHz

Power: (2) AA lithium batteries and/or 5VDC (300mA) plug-in adapter

Battery Life: Up to 2 years @ sampling interval = 5 seconds

Dimensions: 3.1" x 3.8" x 1.1" (7.9cm x 9.8cm x 2.85cm)

Housing: White plastic

\*Specifications subject to change without notice

# WSG WIRELESS POWER SENSOR

## INTRODUCTION



The WSG Wireless Power sensor provides remote power monitoring without running wires. Power status is sent from the sensor to the WSG30 via an integrated 2.4GHz Wireless radio. The device can transmit its signal up to 300' indoors and even greater distances when it has line-of-site. The WSG30 series of Wireless sensors also feature mesh networking technology, which allows each sensor to be used as either a Wireless sensor/router or as a low-power battery operated sensor (also referred to as an end point). When used as a router, greater distances can be realized because each sensor/router adds another 300' of range to the system. The sensor comes with 2 AA lithium batteries which will power the sensor for up to 2 years (end point mode). A plug-in power supply is included, in which case the batteries function as backup power when main AC power fails.

**NOTE:** Do not install the sensor in a dirty, humid, or corrosive environment. Do not install the sensor in close proximity to other 2.4GHz devices (WiFi, etc). Do not install the device inside of a metallic enclosure as this will impede it's ability to Wirelessly communicate with the WSG30 .

## PACKAGE CONTENTS

- |                             |                             |                       |
|-----------------------------|-----------------------------|-----------------------|
| (1) Wireless Power Sensor   | (2) AA Lithium batteries    | (1) 5VDC Power Supply |
| (1) Plastic drywall anchors | (1) #6 Metal tapping screws |                       |

## INSTALLATION SUMMARY

- 1) Locate the sensor serial number on the small white label inside the sensor enclosure .
- 2) Enter the serial number into the WSG30 using the web page or keypad.
- 3) Mount the sensor.
- 4) Attach power supply and install the batteries.
- 5) Watch the LCD or web page to confirm that the sensor has connected with the WSG30.

## SENSOR REGISTRATION

Before you power-up the sensor you must enter the serial number, located on the small white label inside the sensor enclosure, into the WSG30. You can do this with the WSG30 web page or you can enter it using the WSG30 keypad (see Sensor Registration earlier in this manual). Just be sure to jot down the serial number before you attach the sensor to the wall.

## BATTERY INFORMATION

The Wireless Power Sensor can operate for up to 2 years on a good set of AA batteries when the sensor is configured as an end-device with a 5 second sampling interval. Sensors configured as routers must use a plug-in power supply. Faster sampling intervals will reduce battery life. Early production sensors must be used with AA alkaline batteries only. Later sensors are optimized for AA lithium batteries. Sensors optimized for lithium batteries will have a label affixed above the battery holder indicating AA lithium batteries are recommended.

## BATTERY INSTALLATION

Carefully separate the top of the enclosure from the bottom. Locate the battery holder on the circuit board. Take note of the polarity markings identifying the positive and negative ends of the batteries. Install the batteries. Re-attach the top and cover.


## POWER SUPPLY WIRING

To connect the power supply, remove the sensor cover and locate the screw terminals labeled “5V DC”. connect the positive wire from the power supply to the “+” terminal. Plug the power supply into an appropriate outlet.

## MOUNTING

The sensor can be mounted directly on a flat surface. Consideration should be given as to whether or not an electrical outlet will be required if using the optional power supply. Mount the sensor as high as possible to provide for optimal Wireless transmission. When installed within a building where the Wireless signal must travel through several obstructions, the sensor should be located within 250’ of the WSG30 or within 300’ of a sensor/router.

Use a pencil to mark the hole locations at the top and bottom of the housing. Install the drywall anchors (if necessary) to the wall. Attach the housing to the wall using #6 tapping screws.

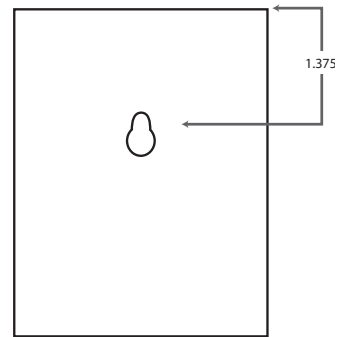

## SPECIFICATIONS

Operating Temperature Range: 32° to 122°F (0° to 50° C)

Operating Humidity: 5- 90% RH non-condensing

Range (Indoor/Urban): Up to 300’ (90m)

Transmit Power Output: 100mW (20dBm)

Operating Frequency: ISM 2.4 GHz

Power: (2) AA lithium batteries and 5VDC (300mA) plug-in adapter

Battery Life: Up to 2 years @ sampling interval = 5 seconds (with power off)

Dimensions: 3.1” x 3.8” x 1.1” (7.9cm x 9.8cm x 2.85cm)

Housing: White plastic

\*Specifications subject to change without notice



# WSG WIRELESS 4-20mA SENSOR

## INTRODUCTION

The WSG Wireless 4-20mA sensor provides remote monitoring of 4-20mA transducers without running wires. Contact data is sent from the sensor to the WSG30 via an integrated 2.4GHz Wireless radio. The device can transmit its signal up to 300' indoors and even greater distances when it has line-of-site. The WSG30 series of Wireless sensors also feature mesh networking technology, which allows each sensor to be used as either a Wireless sensor/router or as a low-power battery operated sensor (also referred to as an end point). When used as a router, greater distances can be realized because each sensor/router adds another 300' of range to the system. The sensor comes with 3 AA alkaline batteries which will power the sensor for up to 2 years (end point mode). An optional plug-in power supply is also available, in which case the batteries function as backup power if main AC power fails (power supply required for router mode).



**NOTE:** Do not install the sensor in a dirty, humid, or corrosive environment. Do not install the sensor in close proximity to other 2.4GHz devices (WiFi, etc). Do not install the device inside of a metallic enclosure as this will impede it's ability to Wirelessly communicate with the WSG30 .

## PACKAGE CONTENTS

(1) Wireless 4-20mA Sensor      (3) AA Alkaline batteries      (1) 5VDC Power Supply  
 (1) Plastic drywall anchors      (1) #6 Metal tapping screws

## INSTALLATION SUMMARY

- 1) Locate the sensor serial number on the small white label inside the sensor enclosure .
- 2) Enter the serial number into the WSG30 using the web page or keypad.
- 3) Mount the sensor.
- 4) Attach power supply if using as a router and install the batteries.
- 5) Watch the LCD or web page to confirm that the sensor has connected with the WSG30.

## SENSOR REGISTRATION

Before you power-up the sensor you must enter the serial number, located on the small white label inside the sensor enclosure, into the WSG30. You can do this with the WSG30 web page or you can enter it using the WSG30 keypad (see Sensor Registration earlier in this manual). Just be sure to jot down the serial number before you attach the sensor to the wall.


## BATTERY INFORMATION

The Wireless 4-20mA Sensor can be used with or without the internal 24VDC supply. When the internal supply is used to power the transducer the device must be powered by an external power supply, in which case the batteries are used as a backup in the event of a power failure. In this scenario the batteries will last approximately 15 hours.

When the 4-20mA sensor is used with the internal 24VDC supply disabled, you can operate it on battery power only. The approximate battery life is 2 years at a sampling frequency of 3 seconds.

## 24 VDC POWER SUPPLY

The Wireless 4-20mA sensor has a internal 24 VDC power supply that is intended to be used to power your 4-20mA transducer. It can provide up to 30mA of current. If your transducer does not require an external power supply then you can disable the 24V supply in the sensor by moving the 24VDC jumper on the circuit board to the OFF position. This will conserve battery power in the event of a power failure.

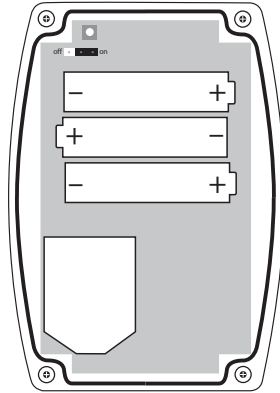

24V Supply in the on position


## WIRING THE 4-20MA TRANSDUCER

If you will be using the internal 24VDC supply, then connect the positive wire of your transducer to the 24VDC terminal on the sensor and connect the negative (or current output) wire of your transducer to the mA terminal on the sensor.



4-20mA Transducer using 24VDC power supply

If your transducer does not require an external 24V supply, then connect the current output wire from the transducer the mA terminal on the sensor and connect the ground wire from your transducer to the GND terminal on the sensor.

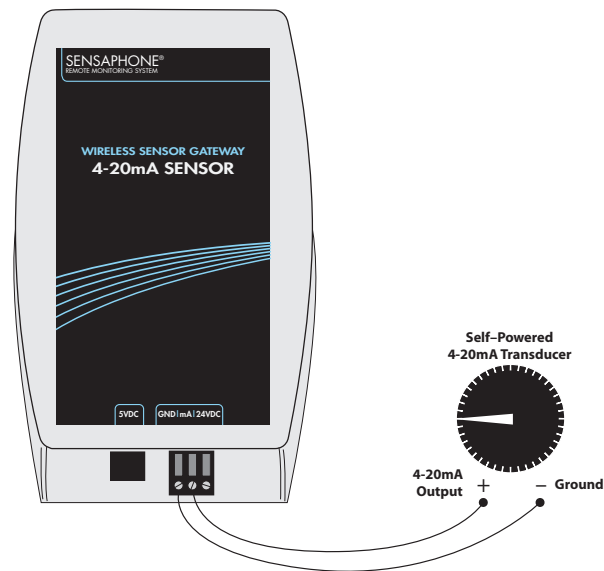

4-20mA sensor with self-powered transducer


## BATTERY INSTALLATION

Remove the four screws on the bottom of the enclosure. Carefully separate the top of the enclosure from the bottom. Locate the three battery clips on the circuit board. Take note of the polarity markings identifying the positive and negative ends of the batteries. Install the batteries in the clips. Re-attach the top and bottom cover with the four screws.

## MOUNTING

The 4-20mA sensor can be mounted directly on a flat surface. Consideration should be given as to whether or not an electrical outlet will be required if using the optional power supply. Mount the sensor as high as possible to provide for optimal Wireless transmission. When installed within a building where the Wireless signal must travel through several obstructions, the sensor should be located within 300' of the WSG30 or within 300' of a sensor/router.

Use a pencil to mark the hole locations at the top and bottom of the housing. Install the drywall anchors (if necessary) to the wall. Attach the housing to the wall using #6 tapping screws.

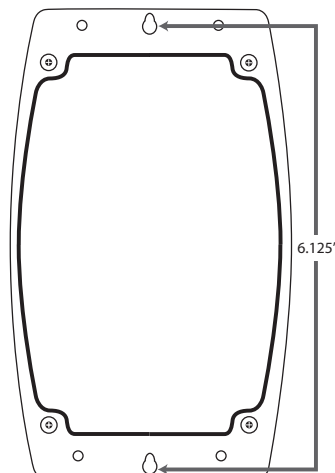

## SOFTWARE CONFIGURATION

The Wireless 4-20mA sensor can provide a scaled value to match the calibrated range of your transducer. In the WSG30 web page, open the Sensor Edit screen for the Wireless 4-20mA Bridge sensor. Insert the Low (4mA) and High (20mA) values for your transducer into the Table Low and Table High fields. The WSG30 will display the scaled value. You may wish to include the units of measure in the Units field.

## SPECIFICATIONS

Operating Temperature Range: 32° to 122°F (0° to 50°C)

Operating Humidity: 5- 90% RH non-condensing

Battery Life (24VDC Supply enabled): 15 hours

Battery Life (24VDC Supply disabled): 2 years @ sampling interval = 3 seconds

Input Load: 260 Ohms

Accuracy:  $\pm 1\%$

Absolute Max Input Current: 23mA

Range (Indoor/Urban): Up to 300' (90m)

Transmit Power Output: 100mW (20dBm)

Operating Frequency: ISM 2.4 GHz

Power: (3) AA alkaline batteries and/or 5VDC (300mA) plug-in adapter

Dimensions: 6.8" x 3.5" x 1.5"

Housing: White plastic

\*Specifications subject to change without notice

# WSG WIRELESS SPOT WATER DETECTION SENSOR

## INTRODUCTION

The WSG Wireless Spot Water Detection sensor provides remote leak detection monitoring without running wires. Contact data is sent from the sensor to the WSG30 via an integrated 2.4GHz Wireless radio. The device can transmit its signal up to 300' indoors and even greater distances when it has line-of-site. The sensor comes with 3 AA alkaline batteries which will power the sensor for up to 2 years (end point mode).



**NOTE:** Do not install the sensor in a dirty, humid, or corrosive environment. Do not install the sensor in close proximity to other 2.4GHz devices (WiFi, etc).

## PACKAGE CONTENTS

(1) Wireless Spot Water Detection Sensor      (3) AA Alkaline batteries

## INSTALLATION SUMMARY

- 1) Locate the sensor serial number on the small white label inside the sensor enclosure .
- 2) Enter the serial number into the WSG30 using the web page or keypad.
- 3) Mount the sensor.
- 4) Attach power supply if using as a router and install the batteries.
- 5) Watch the LCD or web page to confirm that the sensor has connected with the WSG30.

## SENSOR REGISTRATION


Before you power-up the sensor you must enter the serial number, located on the small white label inside the sensor enclosure, into the WSG30. You can do this with the WSG30 web page or you can enter it using the WSG30 keypad (see Sensor Registration earlier in this manual). Just be sure to jot down the serial number before you attach the sensor to the wall.

## BATTERY INFORMATION

The Wireless Spot Water Detection Sensor can operate for up to 2 years on a good set of AA alkaline batteries when the sensor is configured as an end device with a 3 second sampling interval. Faster sampling intervals will reduce battery life.

## BATTERY INSTALLATION

Remove the four screws on the bottom of the enclosure. Carefully separate the top fo the enclosure from the bottom. Locate the three battery clips on the circuit board. Take note of the polarity markings identifying the positive and negative ends of the batteries. Install the batteries in the clips. Re-attach the top and bottom cover with the four screws.

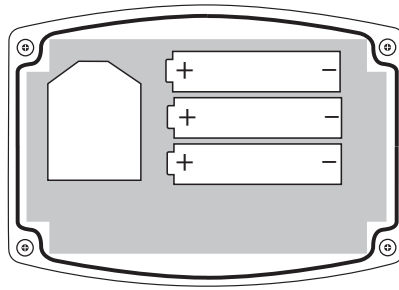

Proper battery installation

## SPECIFICATIONS

Operating Temperature Range: 32° to 122° F (0° to 50° C)

Operating Humidity: 5- 90% RH non-condensing

Range (Indoor/Urban): Up to 250' (76m)

Transmit Power Output: 100mW (20dBm)

Operating Frequency: ISM 2.4 GHz

Power: (3) AA alkaline batteries

Battery Life: Up to 2 years @ Sampling frequency = 3 seconds

Dimensions: 6.8" x 3.5" x 1.5" (

Housing: White plastic

\*Specifications subject to change without notice

# WSG WIRELESS ZONE WATER DETECTION SENSOR

## INTRODUCTION

The WSG Wireless Zone Water Detection sensor provides remote leak detection without running wires. Contact data is sent from the sensor to the WSG30 via an integrated 2.4GHz Wireless radio. The device can transmit its signal up to 300' indoors and even greater distances when it has line-of-site. The WSG30 series of Wireless sensors also feature mesh networking technology, which allows each sensor to be used as either a Wireless sensor/router or as a low-power battery operated sensor (also referred to as an end point). When used as a router, greater distances can be realized because each sensor/router adds another 300' of range to the system. The sensor comes with 3 AA alkaline batteries which will power the sensor for up to 2 years (end point mode). An optional plug-in power supply is also available, in which case the batteries function as backup power if main AC power fails (power supply required for router mode).



**NOTE:** Do not install the sensor in a dirty, humid, or corrosive environment. Do not install the sensor in close proximity to other 2.4GHz devices (WiFi, etc). Do not install the device inside of a metallic enclosure as this will impede it's ability to Wirelessly communicate with the WSG30 .

## PACKAGE CONTENTS

(1) Wireless Zone Water Detection Sensor      (3) AA Alkaline batteries      (1) 10' Water Rope  
(5) Adhesive clamps      (2) Plastic drywall anchors      (2) #6 Metal tapping screws

## INSTALLATION SUMMARY

- 1) Locate the sensor serial number on the small white label inside the sensor enclosure .
- 2) Enter the serial number into the WSG30 using the web page or keypad.
- 3) Mount the sensor.
- 4) Attach power supply if using as a router and install the batteries.
- 5) Watch the LCD or web page to confirm that the sensor has connected with the WSG30.

## SENSOR REGISTRATION


Before you power-up the sensor you must enter the serial number, located on the small white label inside the sensor enclosure, into the WSG30. You can do this with the WSG30 web page or you can enter it using the WSG30 keypad (see Sensor Registration earlier in this manual). Just be sure to jot down the serial number before you attach the sensor to the wall.

## BATTERY INFORMATION

The Wireless Spot Water Detection Sensor can operate for up to 2 years on a good set of AA alkaline batteries when the sensor is configured as an end device with a 3 second sampling interval. Faster sampling intervals will reduce battery life.

## BATTERY INSTALLATION

Remove the four screws on the bottom of the enclosure. Carefully separate the top of the enclosure from the bottom. Locate the three battery clips on the circuit board. Take note of the polarity markings identifying the positive and negative ends of the batteries. Install the batteries in the clips. Re-attach the top and bottom cover with the four screws.

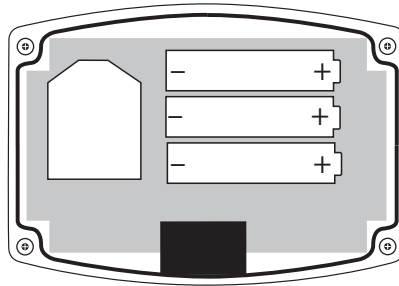

Proper battery installation

## POWER SUPPLY WIRING (ROUTER MODE)

When using your wireless sensor in Router mode, you must use an external power supply (Sensaphone Part #XFR-0046). This is required because router mode uses more power than can be supplied by batteries alone for an extended period of time. You can also use a power supply when the sensor is configured as an End Point, which will greatly extend the life of the batteries and minimize the need to change them.


To connect the power supply, insert the power connector into the 5VDC jack on the side of the unit.

## MOUNTING

The sensor can be mounted on a wall close to the area to be monitored or it can sit directly on a flat surface. Consideration should be given as to whether or not an electrical outlet will be required if using the optional power supply. When installed within a building where the Wireless signal must travel through several obstructions, the sensor should be located within 300' of the WSG30 or within 300' of a sensor/repeater.

Use a pencil to mark the hole locations at the top and bottom of the housing. Install the drywall anchors (if necessary) to the wall. Attach the housing to the wall using #6 tapping screws.

Connect the Water Rope to the connector on the side of the enclosure. Route the Water Rope in the area to be monitored. Secure it using the self-adhesive cable clamps.

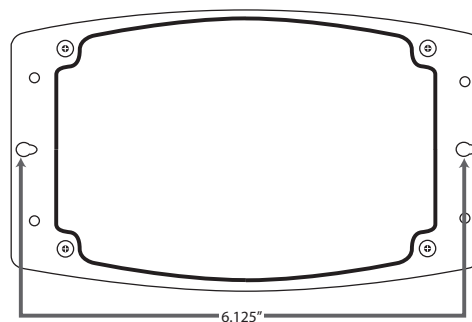



## SPECIFICATIONS

Operating Temperature Range: 32° to 122° F (0° to 50° C)

Operating Humidity: 5- 90% RH non-condensing

Range (Indoor/Urban): Up to 250' (76m)

Transmit Power Output: 100mW (20dBm)

Operating Frequency: ISM 2.4 GHz

Power: (3) AA alkaline batteries and/or 5VDC (300mA) plug-in adapter

Battery Life: Up to 2 years @ sampling interval = 3 seconds

Dimensions: 6.8" x 3.5" x 1.5"

Housing: White plastic

\*Specifications subject to change without notice

# APPENDIX A: WEEKLY TESTING PROCEDURE

We recommend that you test your WSG30 system weekly to be sure it is functioning properly. This will ensure that when a problem arises the WSG30 will be ready to alert the appropriate personnel. A test log template is included at the back of this manual.

There are several tests that can be performed:

1) Check the status of all monitored conditions on the WSG30 by viewing the web page. This will verify that the WSG30 and sensors are communicating and that all of the inputs are reading properly. In addition, you can verify that the electricity is on and that the backup battery is OK.

2) Create an alarm on each Wireless sensor.

**Temperature sensors:** Heat or cool the sensor.

**Humidity sensors:** Raise the humidity around the sensor by holding a cup of very hot water beneath the sensor.

**Dry Contact sensors:** Open or close the circuit to create an alarm condition.

**Water sensors:** Apply a small amount of water beneath the sensor or use a wet towel and touch it to the sensor probes and/or sensing rope.

**Power Sensor:** Disconnect the sensor power supply from the wall outlet.

Allow the unit to send its alarm message to all programmed contacts. This will make sure that the WSG30 is programmed properly. It will also prepare personnel to respond appropriately when they receive a message from the unit.

3) Test the batteries in the WSG30 and each Sensor by unplugging the power supply and making sure that the device and all of its sensors continue to function.

4) If you require assistance, call Sensaphone Technical Support at (610)558-2700.

# APPENDIX B: WSG30 ACCESSORIES

The sensors listed below are available from Sensaphone and represent the most commonly used input devices. Other sensors, designed for more specialized applications, may also be used. Commercial or industrial electrical supply houses can provide devices to monitor virtually any condition. For further information, contact Sensaphone Customer Service at (610)558-2700.

PART # . . . . .	DESCRIPTION
FGD-WSG30-TMP. . . . .	WSG Wireless Temperature Sensor
FGD-WSG30-TEX. . . . .	WSG Wireless Temperature Sensor with External Probe
FGD-WSG30-TEX85. . . . .	WSG Wireless Ultra Low Temperature Sensor with External Probe
FGD-WSG30-GBV. . . . .	WSG Wireless Temperature Sensor in Glass Bead Vial
FGD-WSG30-GBV-NIST. . . . .	WSG Wireless Temperature Sensor in Glass Bead Vial
FGD-WSG30-HUM. . . . .	WSG Wireless Humidity Sensor
FGD-WSG30-DRY. . . . .	WSG Wireless Dry Contact Sensor
FGD-WSG30-PWR. . . . .	WSG Wireless Power Failure Sensor
FGD-WSG30-4-20. . . . .	WSG Wireless 4-20mA Sensor
FGD-WSG30-SPOT. . . . .	WSG Wireless Spot Water Sensor
FGD-WSG30-ZONE. . . . .	WSG Wireless Zone Water Sensor
BAT-0020. . . . .	WSG30 Rechargeable Battery
FGD-0006. . . . .	Magnetic Reed Switch <sup>1</sup>
FGD-0007. . . . .	Passive Infra-Red Detector <sup>1</sup>
FGD-0010. . . . .	50' two-conductor #22AWG shielded Cable
FGD-0049. . . . .	Smoke Detector with Built-in Relay <sup>1</sup>
FGD-0063. . . . .	Additional 10' Water Rope for FGD-WSG30-ZONE
FGD-0065. . . . .	Carbon Monoxide Sensor <sup>2</sup> (4-20mA output)
FGD-0066. . . . .	Air Quality Sensor <sup>2</sup> (4-20mA output)
FGD-0067. . . . .	Surge Suppressor
FGD-0068. . . . .	Carbon Dioxide Sensor <sup>2</sup> (4-20mA output)
FGD-0100. . . . .	2.8k Remote Temperature Sensor <sup>3</sup>
FGD-0101. . . . .	2.8k Weatherproof Temperature Probe <sup>3</sup>
FGD-0107. . . . .	2.8K Temperature Sensor with Glass Bead Vial <sup>3</sup>
FGD-0220. . . . .	J-Type Thermocouple/4-20mA Converter <sup>2</sup>
FGD-0222. . . . .	Float Switch <sup>1</sup>

1 For use with WSG Wireless Dry Contact Sensor

2 For use with WSG Wireless 4-20mA Sensor

3 For use with WSG Wireless Temperature Sensor

# **APPENDIX C: RETURNING A WSG DEVICE FOR REPAIR**

In the event that any of your Sensaphone WSG30 devices do not function properly, we suggest that you do the following:

- 1) Record your observations regarding the individual unit's malfunction.
- 2) Call the Technical Service Department at 610.558.2700 prior to sending the unit to Sensaphone for repair.

If the unit must be sent to Sensaphone for Servicing, please do the following:

- 1) Power the device off.
- 2) Disconnect all cables, inputs and wiring, and unplug the unit.
- 3) Carefully pack the unit to avoid damage in transit. Use the original container (if available) or a sturdy shipping box.
- 4) To avoid shipping delays, please visit [www.sensaphone.com](http://www.sensaphone.com) and download a Repair form (found under the Support Tab>Repair Services). If unable to use the form please include :
  - a) Your name, address and telephone number.
  - b) A note explaining the problem.
- 5) Ship your package to the address below:

**SERVICE DEPARTMENT  
Sensaphone  
901 Tryens Road  
Aston, PA 19014**

- 6) Ship prepaid and insured via UPS or US Mail to ensure a traceable shipment with recourse for damage or replacement.

# APPENDIX D: SPECIFICATIONS

## ALARM NOTIFICATION METHODS:

- E-Mail, Text Message, SNMP Trap
- 8 Alarm escalation levels
- Comprehensive scheduling per input, user, and alarm destination

## DESTINATIONS:

- 8 Programmable User Profiles
- 4 Programmable destinations per profile
- Alarms can be assigned to specific User Profiles

## COMMUNICATION TYPES:

- E-Mail – SMTP
- Text Messages via SMTP
- Web page – HTTP
- SNMP – MIB with Traps, GET, GETNEXT, and SET
  - MODBUS®/TCP Slave Conformance Class 0 and 1

## SENSORS:

- Up to 30 Wireless Sensors
- Dry Contact - Normally Open /Normally Closed
- Temperature - 2.8K Thermistor
- Water detection
- Humidity
- Power Failure
- 4-20mA Current Loop
- 12-Bit Resolution

## CERTIFICATION STANDARDS:

- FCC Part 15 – Class B Compliant **Data logging**
- 32,000 Samples (all samples include data, date, and time)
- 1 second to 100 hours sampling rate, variable rate per sensor
- User programmable sensor selection

- Battery
- Power Supply

## COMMUNICATION PORTS:

- Ethernet 10/100Base-T

## LOCAL INDICATORS:

- 80 Character lighted LCD
- Ethernet link and Activity LEDs

## POWER REQUIREMENTS:

- External transformer 120VAC 60Hz input/9VDC Output
- Rechargeable Battery Backup (included)

## WIRELESS TECHNOLOGY:

- 2.4GHz/ISM

## OPERATING CONDITIONS:

- 0-50°C (32-122°F)
- 0-90% RH, non-condensing

## PHYSICAL PROPERTIES:

- 7.6" x 5.1" x 2.0" (19cm x 13cm x 5cm)
- 2.5 lbs (1.3kg)

# APPENDIX C: MODBUS® SPECIFICATIONS

Inputs	TYPE	VALID RANGE	BASE	OFFSET
Input Calibration (fixed-point integer)	sint16	±300.00	4x10496	169
Normal Logging Frequency (max 31 days)	uint32	0 - 2678400 s.	4x10500	
Alarm Logging Frequency (max 31 days)	uint32	0 - 2678400 s.	4x10502	
Alarm low limits	float	±80000.00	4x10583	
Alarm high limits	float	±80000.00	4x10585	
Low table limit (4-20mA)	float	±80000.00	4x10587	
High table limit (4-20mA)	float	±80000.00	4x10589	
Summary Page Gauge Low Limit	float	±80000.00	4x10591	
Summary Page Gauge High Limit	float	±80000.00	4x10593	
Name	string	0 - 32 characters	4x10595	
Recognition Time	uint16	0 - 28800 s.	4x10627	
Alarm reset time (seconds) (max 8 hours)	uint16	0 - 28800 s.	4x10629	
Input Type	uint8	0x00 - 0xFF	4x10631	
Custom Units of Measure	string	0 - 16 characters	4x10632	
Type of Units	uint8	0x00 - 0xFF	4x10648	
Serial Number	uint32	Any value	4x10649	
Wireless Sample Rate	uint8	Any value	4x10651	
Minimum value	float	±80000.00	3x01536	42
Minimum value (fixed-point integer)	sint32	±80000.00	3x01538	
Maximum value	float	±80000.00	3x01540	
Maximum value (fixed-point integer)	sint32	±80000.00	3x01542	
Last alarm (timestamp)	uint32	Any Value	3x01546	
Real value (floating-point)	float	±80000.00	3x01550	
Real value + units (string)	string	Any Non-Null	3x01552	
Real value (fixed-point integer)	sint32	±80000.00	3x01576	
Enables/Disables the entire I/O point.	bit	TRUE or FALSE	0x01536	32
Enables/Disables Alarming	bit	TRUE or FALSE	0x01537	
Enables/Disables Alarm on return-to-normal	bit	TRUE or FALSE	0x01540	
Reset the Minimum	bit	TRUE	0x01552	
Reset the Maximum	bit	TRUE	0x01553	
Alarm Condition	uint8	0x00 - 0xFF	1x00256	42
Realtime state, ignoring recognition time.	uint8	0x00 - 0xFF	1x00270	
<b>USER PROFILES</b>	<b>TYPE</b>	<b>VALID RANGE</b>	<b>BASE</b>	<b>OFFSET</b>
Access level	uint8		4x00768	86
Call escalation priority level	uint8	0x00 - 0xFE	4x00769	
The user's full name	string	0 - 32 characters	4x00772	
Username for login	string	0 - 16 characters	4x00796	
Password for login	string	0 - 16 characters	4x00812	
Profile Schedule	42-byte array	Any Value	4x00828	
Enable/Disable Profile	bit	TRUE or FALSE	0x00512	10

CONTACTS	TYPE	VALID RANGE	BASE	OFFSET
e-mail address	string	0 - 64 characters	4x02144	87
Type of communication (voice, e-mail, SMS)	uint8	0 - 5	4x02180	
Contact Schedule	42-byte array	Any Value	4x02206	
Enable/Disable Contact	bit	TRUE or FALSE	0x00768	8

NETWORK	TYPE	VALID RANGE	BASE
DNS Server IP Address	uint32	Any Value	3x00000
Gateway IP Address	uint32	Any Value	3x00002
IP Address	uint32	Any Value	3x00004
Netmask	uint32	Any Value	3x00006
HTTP Port	uint16	1..65535	3x00008
SMTP Port	uint16	1..65535	4x00000
SMTP e-mail server name	string	0 - 32 characters	4x00001
Return address for outgoing e-mails	string	0 - 32 characters	4x00037
SMTP-AUTH user name	string	0 - 32 characters	4x00073
SMTP-AUTH password	string	0 - 32 characters	4x00089
SNMP Read-Only/Public String	string	0 - 16 characters	4x00256
SNMP Read-Write/Private String	string	0 - 16 characters	4x00272
SNMP Manager Server (host or IP)	string	0 - 32 characters	4x00288
Time Synchronization Server (host or IP)	string	0 - 32 characters	4x00324
Enable/Disable DHCP	bit	TRUE or FALSE	1x00000
SMTP-AUTH security enable	bit	TRUE or FALSE	1x00001
Enable/Disable SNMP agent	bit	TRUE or FALSE	1x00003

SYSTEM	TYPE	VALID RANGE	BASE
Name for unit	string	0 - 32 characters	4x00512
Description for the unit	string	0 - 32 characters	4x00552
Location for the unit	string	0 - 32 characters	4x00592
System time	uint32	Any Time >= 2009	4x00632
Call escalation delay (minutes)	uint8	Any Value	4x00637
Modbus®/TCP Operating Mode	uint8		4x00640
Modbus®/TCP Byte Order (Slave Mode)	uint8		4x00641
Modbus®/TCP Port (Slave Mode)	uint8		4x00642
Summary Web Page Display Mode	uint8	0 or 1	4x00649
Automatic daylight saving time adjustment	bit	TRUE or FALSE	0x00256
Reset the datalogger	bit	TRUE	0x00257
Reset the eventlogger	bit	TRUE	0x00258
System time (string)	string	Any Time >= 2009	3x00256

# MODBUS® NOTES

## MODBUS® ADDRESSES

### ADDRESS RANGES

THE MODBUS® ADDRESS RANGES ARE LAID OUT ACCORDING TO THE FOLLOWING COLOR-CODED TABLE. THE FORMAT BELOW IS TXDDDDDD WHERE “T” IS THE ADDRESS TYPE (BIT/WORD, READ-WRITE/READ-ONLY) AND DDDDD IS A 5 DIGIT DECIMAL BASE NUMBER FROM 0 TO 65535.

Modbus® Mode	Modbus® Address Range
bit, read-write	0x00000 - 0x65535
bit, read-only	1x00000 - 1x65535
word, read-only	3x00000 - 3x65535
word, read-write	4x00000 - 4x65535

THE MEMORY TYPES MAP TO THE MODBUS® COMMANDS AS SHOWN IN THE FOLLOWING TABLE. THE WSG30 SUPPORTS MODBUS® CONFORMANCE CLASSES 0 AND 1.

Address Type	Modbus® Commands
0	1, 5, 15
1	2
3	4
4	3, 6, 16

### ADDRESS CALCULATION

MODBUS® ADDRESS CALCULATIONS ARE PERFORMED ACCORDING TO THE FOLLOWING TABLE:

Type	Calculation	Notes
Inputs	$BASE + (OFFSET * INPUT\_NUMBER)$	The input number is as follows: Zone 1 = 0 ..... ..... ..... Zone 30 = 29 Power = 30 Battery = 31
Profiles	$BASE + (OFFSET * PROFILE\_NUMBER)$	The profile number is as follows: Profile 1 = 0 Profile 2 = 1 Profile 3 = 2 Profile 4 = 3 Profile 5 = 4 Profile 6 = 5 Profile 7 = 6 Profile 8 = 7
Contacts	$BASE + (OFFSET * ((PROFILE\_NUMBER * 6) + CONTACT\_NUMBER))$	The contact number is as follows: Contact 1 = 0 Contact 2 = 1 Contact 3 = 2 Contact 4 = 3
Network	BASE	
System	BASE	



## QUICK ACCESS TABLE

THE FOLLOWING IS A QUICK ACCESS TABLE TO RETRIEVE THE WORD-ACCESS, READ-ONLY CURRENT INPUT VALUES AS HUMAN-READABLE ASCII STRINGS. USE THE MODBUS® COMMAND “4” TO ACCESS THE DATA.

Address	Description	Address	Description	Address	Description
3x01552	Zone 1	3x01888	Zone 9	3x02224	Zone 17
3x01594	Zone 2	3x01930	Zone 10	3x02266	Zone 18
3x01636	Zone 3	3x01972	Zone 11	3x02308	Zone 19
3x01678	Zone 4	3x02014	Zone 12	3x02350	Zone 20
3x01720	Zone 5	3x02056	Zone 13	3x02392	Zone 21
3x01762	Zone 6	3x02098	Zone 14	3x02434	Zone 22
3x01804	Zone 7	3x02140	Zone 15	3x02476	Zone 23
3x01846	Zone 8	3x02182	Zone 16	3x02518	Zone 24

Address	Description
3x02560	Zone 25
3x02602	Zone 26
3x02644	Zone 27
3x02686	Zone 28
3x02728	Zone 29
3x02770	Zone 30
3x02812	Power
3x02854	Battery

## MODBUS® DATA FORMATS

### BIT-REPRESENTATION

THE MODBUS® INTERFACE SUPPORTS A PROGRAMMABLE BIT ORDERING. BOTH THE BYTE- AND WORD-ORDERS MAY BE INDIVIDUALLY PROGRAMMED TO EITHER LITTLE- OR BIG-ENDIAN FORMATS. THE DEFAULT IS BIG-ENDIAN BYTE-ORDER AND LITTLE-ENDIAN WORD-ORDER. THIS ONLY APPLIES TO NUMERIC VALUES. ARRAY, STRING AND BIT TYPES ARE ALWAYS GIVEN IN THE SAME FORMAT.

### BIT

BIT VALUES ARE BOOLEAN VALUES WHERE 1 IS “TRUE” AND 0 IS “FALSE”.

### UINT8, SINT16, UINT32, SINT32

THESE ARE INTEGER DATA FORMATS. THE “U” STANDS FOR “UNSIGNED”, THE “S” STANDS FOR “SIGNED”. THE NUMBER INDICATES THE NUMBER OF BITS USED TO REPRESENT THE DATA: 8, 16, OR 32 CORRESPONDING TO 1, 2, OR 4 BYTES RESPECTIVELY. 1 AND 2 BYTE INTEGERS ARE STORED IN ONE MODBUS® REGISTER WHILE 4-BYTE INTEGERS ARE STORED IN TWO CONSECUTIVE MODBUS® REGISTERS. THE BYTE- AND WORD-ORDERS ARE PROGRAMMABLE. THE INTEGER TYPES MAY BE EITHER FIXED-POINT FORMAT OR THE STANDARD STRAIGHT INTEGER FORMAT. FIXED-POINT INTEGER FORMATS ARE OFFSET BY “100”, SO DIVIDE THE STRAIGHT BINARY VALUE BY “100” TO GET THE REAL VALUE. THIS PROVIDES 2 DECIMAL PLACES OF PRECISION FOR A MAXIMUM RANGE OF ±80000.00.

### FLOAT

THIS IS A STANDARD IEEE 754 32-BIT FLOATING-POINT NUMBER. ALL FLOATING-POINT NUMBERS WILL BE IN THIS FORMAT AND SPAN 2 CONSECUTIVE MODBUS® REGISTERS ACCORDING TO THE PROGRAMMED BYTE- AND WORD-ORDERS.

### STRING AND ARRAY

STRINGS AND ARRAYS ARE STRINGS OF 0 OR MORE CHARACTERS/BYTES. THEY ARE ALWAYS RETURNED FIRST-BYTE FIRST AND LAST-BYTE LAST. STRINGS ARE NULL-TERMINATED WITH A BINARY 0 ONLY IF THEY ARE SMALLER THAN THEIR MAXIMUM SIZE. FOR EXAMPLE, A “NAME” STRING MAY BE UP TO 32-CHARACTERS LONG. A VALUE OF “JOHN DOE” WOULD

BE TERMINATED BY A "0" BECAUSE IT IS LESS THAN 32-CHARACTERS LONG, BUT NOT A NAME THAT IS 32-CHARACTERS LONG. ARRAYS ARE NEVER TERMINATED.

## NON-GENERIC DATA

### TIMESTAMPS

TIMESTAMPS CAN BE DECODED USING THE FOLLOWING EQUATIONS. "DIV" MEANS INTEGER DIVISION WHERE THE REMAINDER IS DROPPED. "MOD" MEANS THE "MODULUS" OR "REMAINDER". ALL VALUES START AT "0". FOR EXAMPLE, DAY 0 IS THE FIRST DAY OF THE MONTH AND MONTH 0 IS JANUARY. THE YEAR IS OFFSET BY -2000, SO THAT A VALUE OF 9 INDICATES 2009.

$$\begin{aligned} \text{Seconds} &= (\text{Value div } 1) \text{ mod } 60 \\ \text{Minutes} &= (\text{Value div } 60) \text{ mod } 60 \\ \text{Hours} &= (\text{Value div } 3600) \text{ mod } 24 \\ \text{Day} &= (\text{Value div } 86400) \text{ mod } 31 \\ \text{Month} &= (\text{Value div } 2678400) \text{ mod } 12 \\ \text{Year} &= (\text{Value div } 32140800) \end{aligned}$$

TIMESTAMPS ARE ENCODED IN THE REVERSE:

$$\begin{aligned} \text{Timestamp} &= (\text{Seconds} \quad * 1) + \\ &\quad (\text{Minutes} \quad * 60) + \\ &\quad (\text{Hours} \quad * 3600) + \\ &\quad (\text{Day} \quad * 86400) + \\ &\quad (\text{Month} \quad * 2678400) + \\ &\quad (\text{Year} \quad * 32140800) \end{aligned}$$

### 42-BYTE ARRAYS (SCHEDULES)

THE 42-BYTE ARRAYS ARE BITMAPPED BOOLEAN SCHEDULE DATA, WHERE THE FIRST BIT OF THE FIRST BYTE INDICATES THE FIRST 30-MINUTE BLOCK ON SUNDAY MORNING (12:00:00AM TO 12:29:59AM) AND THE LAST BIT OF THE LAST BYTE INDICATES THE LAST 30-MINUTE BLOCK ON SATURDAY EVENING (11:30:00PM TO 11:59:59PM).

### INPUT TYPES:

Input Type	Description
0	Normally Open
1	Normally Closed
2	2.8k Thermistor °F
3	2.8k Thermistor °C
4	10k Thermistor °F
5	10k Thermistor °C
6	4-20mA
12	Battery (Internal)
13	Power (Internal)

### ALARM CONDITION AND REALTIME STATE:

State	Description
0	OK (No Alarm)
1	Low Limit Alarm or Closed Dry Contact Alarm
2	High Limit Alarm or Open Dry Contact Alarm

**ACCESS LEVEL:**

Access Level	Description
0	Access Disabled
1	Read-Only
2	Read-Write

**CONTACT TYPES:**

Contact Type	Description
3	Email or SMS
9	SNMP Trap

**MODBUS® CONFIGURATION:**

Operating Mode	Description
0	Modbus® Disabled
1	Read-Only
2	Read-Write

Bit Representation	Description
0	Big-Endian Byte Order Little-Endian Word Order (Modbus® Default)
1	Big-Endian Byte Order Big-Endian Word Order (Network Byte Order)
2	Little-Endian Byte Order Little-Endian Word Order (Intel Byte Order)

**SUMMARY WEB PAGE DISPLAY MODE**

Gauge Mode	Description
0	Arrow Mode
1	Bar Mode

# TEST LOG

Date	Inputs		Dialout		Call-In		Battery				Tested By
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	
	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	Pass <input type="checkbox"/>	Fail <input type="checkbox"/>	