

QUICK REFERENCE GUIDE

COMMAND SUMMARY

TEMP#1, #2, & #3

High Limit: +160 deg F max.
Low Limit: -20 deg F min.
Mode: On, Off, Status-Only
Rec Time: 0m, 0s - 999m, 59s
Phone Selection: 1-8

AC POWER

Mode: On, Off, Status-Only
Rec Time: 0m, 0s - 999m, 59s
Phone Selection: 1-8

HIGH WATER

Mode: On, Off Status-Only
Rec Time: 0m, 0s - 999m, 59s
Phone Selection: 1 - 8

BATTERY

High Limit: 16V max.
Low Limit: 0V min.
Mode: On, Off, Status-Only
Rec Time: 0m, 0s - 999m, 59s
Phone Selection: 1-8

BILGE #1 & #2

Mode: On, Off, Status-Only
Run Time: (0=disabled), 999m, 59s
Cyc/Hr: (0=disabled), 1-120cyc/1-24hrs
Phone Selection: 1 - 8
Data Reset: Y/N

AUXILIARY

Mode: On, Off, Status-Only
Rec Time: 0m, 0s - 999m, 59s
Normality: Open/Closed
Phone Selection: 1-8

SYSTEM

Max Calls: 1-255
Call Delay: 0m, 0s - 999m, 59s
Intercall Delay: 0m, 30s - 999m, 59s
Dialing Method: Pulse/ Tone
TAD: On/Off
Voice Reps: 1 - 10
Rings til Answer: 1 - 255
Listen-In: 0 - 255s

Speaker: On/Off
Temp Scale: deg F/deg C
Output Trigger: All, Security-Only
Output Mode: Away, Away/Onboard
Current Time: xx:xx (military)
Today's Date: month/day

SECURITY

Mode: On, Off, Status-Only
Rec Time: 0m, 0s - 999m, 59s
Normality: Open/ Closed
Phone Selection: 1 - 8

MODE Key

- 1) Toggles between Standby, Onboard & Away modes.
- 2) Toggles between parameter options from within a menu.

ENTER Key

Used to enter programming changes or to clear parameters.

DOWN ARROW Key

- 1) Scrolls through the idle status screens.
- 2) Used to move through menu options without changing programming parameters.

UP ARROW Key

- 1) Scrolls through the idle status screens.
- 2) Used as a backspace key when entering phone number or dialout selection.

CODE Key

- 1) Used to insert a decimal point.
- 2) Used to program special dialing options within a phone number.

CODE 1 = W, wait til answer

CODE 2 = P, pause for 2 seconds

CODE 3 = V, give voice report and hangup

CODE 4 = #, hangup the call

CODE 5 = D, wait for dial tone